

Quick Consumer Manual

 


Welcome

Thank you for purchasing a Huebsch® appliance. We value you as a customer. At Huebsch, leading performance is our daily reality. We seek to deliver an outstanding experience in every aspect of laundry. Your machine was built to last 25 years in your home and Huebsch support has been built to provide you with the best service in the industry.

Installation

Parts included:



Two (2) filter
screen washers



Two (2) plain
rubber washers



Four (4) rubber
feet



Beaded strap

1. Remove shipping brace and shipping plug.
2. Wipe out inside of washtub.
3. Connect fill hoses – water pressure = 20-120 psi [138-827 kPa].
 - Two required, sold separately
 - Flush water supply lines
 - Use two filter screen washers with screen facing faucet
 - Use two rubber washers in end of hose connecting to the machine
4. Connect drain hose to drain receptacle – 36 in. [91 cm] recommended height.
 - Use beaded strap to secure drain hose to drain receptacle
5. Position and level washer – adjust front two legs. Tilt washer forward and back to set rear legs.
 - Place four rubber feet on leveling legs
6. Connect washer to electrical power – on individual branch circuit. Refer to serial plate for electrical ratings.
7. Run washer through one complete cycle to make sure it is operating properly.
8. Check for leaks.



Cycle Information

The Normal Eco Cycle

The Normal Eco Cycle is designed for providing an eco-friendly solution for washing everyday cottons and linens. You will notice that this cycle uses less water and less hot water than other cycles. These functions are unique to the Normal Eco Cycle. All other cycles and options have no temperature restriction and use a full tub rinse.

Fabric softener should not be used with the Normal Eco cycle unless the Extra Rinse option is also selected.

The Favorites Cycle

The Favorites keypad allows the user to save nine different cycles, selections and options for later use.

 
1. Press the Favorites keypad. The control will display the settings for the first Favorites cycle. The display will switch between F1 and the cycle time for the selected cycle.
2. Press the keypads for the desired settings.
3. Press the Favorites keypad to save the settings.
4. The next Favorites cycle, F2, will be displayed. Access saved Favorites cycles by pressing Favorites keypad and then the up and down arrow keypads.

Auto Fill

Auto Fill will provide the most efficient use of water and also enhance wash performance by optimizing the water level for each particular load size and type.

Electronic Control Washers – Special Cycles Reference

When you select the Special Cycles keypad, pressing the up and down arrow keypads will allow you to choose from eight different cycles. The display will show P and a number relating to the cycle.

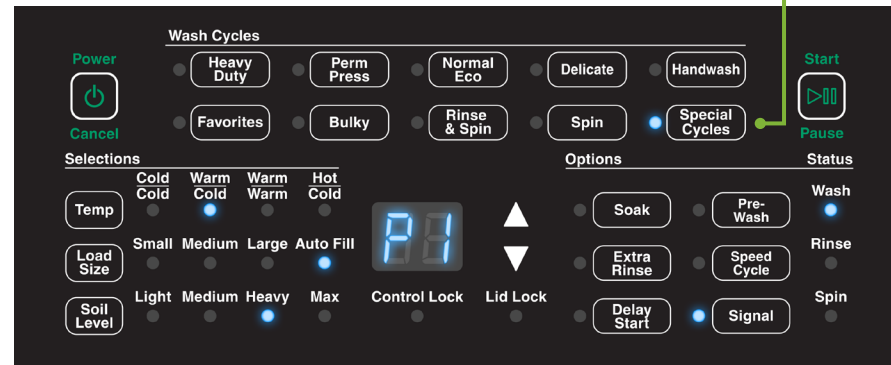

**P1****Eco Heavy Duty**

This cycle uses a spray rinse to reduce water consumption. It also uses less hot water. It has a longer wash time than the Normal Eco cycle. If using fabric softener in this cycle, select the Extra Rinse option.

P2**Eco Delicate**

This cycle uses a spray rinse to reduce water consumption. It also uses less hot water. It has a shorter wash time and a gentler wash action than the Normal Eco cycle. If using fabric softener in this cycle, select the Extra Rinse option.

P3**Waterproof**

Wash waterproof items such as rain coats and bed liners with this cycle. It includes a gentle agitation, very low spin, and lower water levels. For best washing results, add another item such as a cotton sheet on top of the waterproof items to make sure they get fully submersed in the water and that no air is trapped under the waterproof items.

P4**Super Soiled**

Use for very heavily soiled items. It includes a 15-minute soak at the beginning of the cycle, a longer wash time than Heavy Duty and Extra Rinse.

P5**Whites**

This cycle is designed to keep white laundry white. It utilizes a longer wash time. Use for items such as sheets and towels.

P6**Wool**

Wash wool items using this cycle. It includes cold water, a 30-minute soak, a very short gentle agitation, a one-minute spin, a cold rinse, and an extended spin time.

P7**Athletic**

This cycle includes a cold wash and a shorter, gentle agitation.

P8**Denim**

This cycle is similar to the Heavy Duty cycle but with cold wash and a longer spin time.

Operating

1. Prepare laundry



2. Add laundry supplies
Fabric Softener



Bleach
Detergent
(bottom of washtub)

3. Load laundry



4. Close lid



 
5. Set cycle

6. Set temperature


7. Set load size
(Auto fill recommended)

8. Set soil level

9. Press start/pause

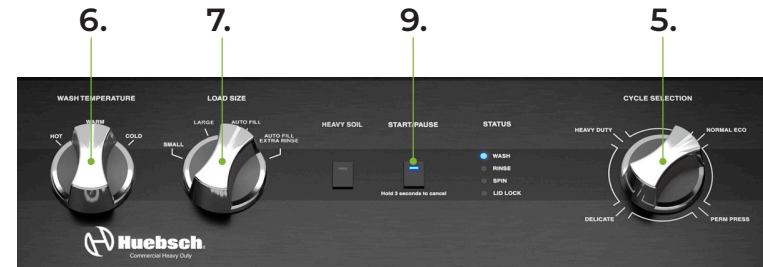

TR3 control

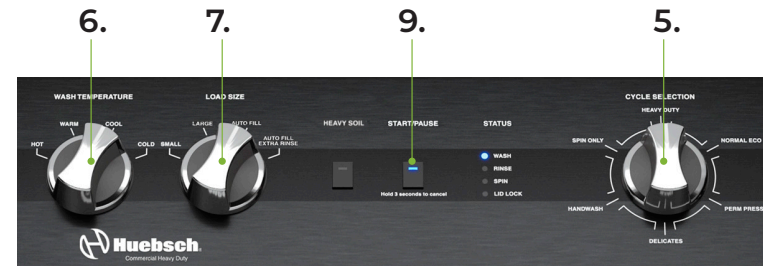 

TR5 control



TR7 control

Register

 
1. Register your product at ca.huebsch.com to take full advantage of the limited warranty.



3, 5 & 7 Year Warranties, depending on your model.
Covers all parts and in-home labor.

Note: This unit includes a limited warranty. Refer to alliancedoc.net to download the full warranty bond.

2. Download full documentation and view installation and operating videos for an immersive experience at alliancedoc.net or scan the QR code below.

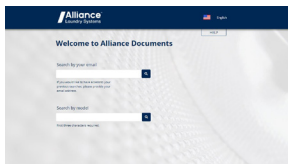

3. If you wish to receive printed documents at no cost, please complete the order form and return by mail to the address on the form, or email your request to technicalcommunications@alliancels.com.

Order Form for Printed Documentation

- ☐ Please send me a printed Installation Manual, User's Guide, and Warranty Bond.
☐ I understand this card does not register my product. I must go to ca.huebsch.com to register.

Model No. _____

Serial No. _____

Name _____

Address _____ City _____ State _____

Zip Code _____ Phone No. _____

Email Address _____


Allow 1-2 weeks for delivery.
NOTE: Orders will be fulfilled for models with serial numbers from 1903000000 through 2312999999.




Part No. 205055R1

March 2025

 © Published by permission of the copyright owner – DO NOT COPY or TRANSMIT
Huebsch by Alliance Laundry Systems



 NO POSTAGE
NECESSARY IF
MAILED IN THE
UNITED STATES

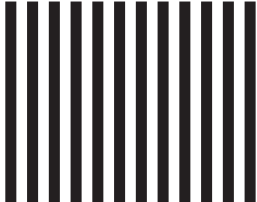

BUSINESS REPLY MAIL

FIRST CLASS MAIL PERMIT NO. 489 RIPON, WI

POSTAGE WILL BE PAID BY ADDRESSEE

HUEBSCH

TECHNICAL DOCUMENTATION
SHEPARD STREET
P O BOX 990
RIPON WI 54971-9967

