


# Helpful Hints for Your Frontload Washer

- This washer has pauses that are part of its normal operation. These pauses occur at the following times:
  1. When the washer is first started (3-5 second pause).
  2. During tumble action washing and rinsing (8 second pauses between tumbles).
  3. Between wash and rinse cycles (15 to 30 seconds).
- For your safety, this washer has a door locking mechanism that keeps the door securely shut during its operation.
- For the best cleaning results, use only low sudsing detergents recommended for use with high efficiency or front loading washers.
- If using detergents made for topload washers, avoid oversudsing by using only 1/4 cup regular detergent (1/2 of the recommended amount).

If items need to be added or removed after a cycle has started, turn the Cycle Selector knob to the OFF position. Wait until the DOOR light goes off (approximately 45 seconds after cycle has been stopped), open door, add or remove items, and start the cycle again.

There is no agitator on this washer. Instead, the clothing gently tumbles through the water. The wash action consists of a period of tumbling in one direction, a brief pause, and then a reverse tumble in the opposite direction. The pauses are part of the tumble action and add to the uniqueness of the washer. They are part of the cycle.

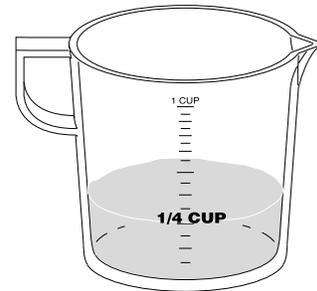

M341ME1B


**NOTE: The normal level of suds should be below the center of the door.**

# Suggestions utiles pour votre machine à laver à chargement frontal

- Cette machine à laver effectue des pauses qui font partie de son fonctionnement normal. Ces pauses se produisent dans les cas suivants :
  1. Lors de la mise en marche de la machine (entre 3 et 5 secondes de pause).
  2. Pendant le culbutage du lavage et du rinçage (pause de 8 secondes entre les culbutages).
  3. Entre les cycles de lavage et de rinçage (entre 15 et 30 secondes).
- Par mesure de sécurité, cette machine à laver est dotée d'un mécanisme de verrouillage de porte qui maintient la porte solidement fermée pendant le fonctionnement de la machine.
- Pour un nettoyage supérieur, n'utiliser que des détergents peu savonneux pour les machines à laver à haut rendement ou avec chargement du linge à l'avant.
- Avec l'utilisation de détergents destinés aux machines à chargement par le haut, éviter toute mousse savonneuse excessive en ne mettant qu'un quart de tasse de détergent normal (soit la moitié de la quantité recommandée).

Pour ajouter ou retirer des articles après le démarrage du cycle, placer le bouton sélecteur de cycle en position OFF (arrêt). Attendre l'extinction du voyant DOOR (45 secondes environ après l'arrêt du cycle), ouvrir la porte, ajouter ou retirer des articles, puis reprendre le cycle.

Ce lave-linge ne comporte pas d'agitateur. Le linge est délicatement culbuté dans l'eau. Le processus de lavage consiste en une période de culbutage dans un sens, suivie d'une courte pause, puis d'un culbutage dans l'autre sens. Les pauses font partie du processus de culbutage et constituent l'une des particularités de ce lave-linge. Elles sont incluses au cycle.

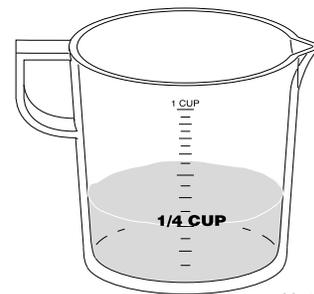

**REMARQUE : Le niveau normal des bulles doit être inférieur au centre de la porte.**