


Dryer

Refer to Page 9 for Model Identification

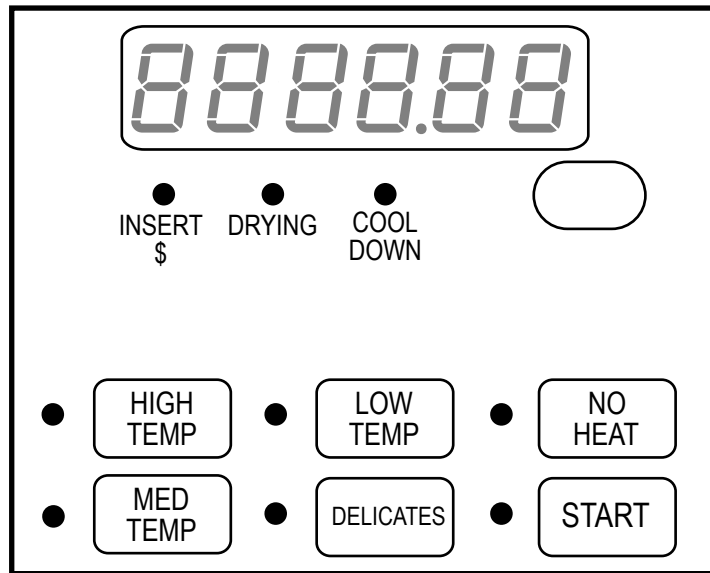

DRY599R_SVG

Original Instructions

Keep These Instructions for Future Reference.

CAUTION: Read the instructions before using the machine.

(If this machine changes ownership, this manual must accompany machine.)



WARNING

Failure to install, maintain, and/or operate this machine according to the manufacturer's instructions may result in conditions which can produce bodily injury and/or property damage.

W030



WARNING

For your safety and to reduce the risk of fire or an explosion, do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

W022

NOTE: The WARNING and IMPORTANT instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution, and carefulness are factors which cannot be built into these washers. These factors MUST BE supplied by the person(s) installing, maintaining, or operating the unit.

Always contact the distributor, service agent, or the manufacturer about any problems or conditions you do not understand.



Read all instructions before using unit.



Hazardous voltage inside. Disconnect power before servicing.

This product uses FreeRTOS V7.2.0 (www.freertos.org).

Table of Contents

Model Identification (Table 1 of 2)	9
Model Identification (Table 2 of 2)	10
Preliminary Information	13
About the Control.....	13
Glossary of Terms.....	13
Power Failure Recovery.....	13
Communications.....	13
Infra-red Communications.....	13
Serial Card Reader Communications (Card Models Only).....	13
Network Communications.....	14
Control Identification	15
SELECT CYCLE Pads.....	15
START Pad.....	15
Display Identification	17
Light Emitting Diodes (LEDs).....	17
INSERT COINS/CARD LED.....	17
START LED.....	17
DRYING LED.....	17
COOL DOWN LED.....	17
Six 7-Segment Digits.....	17
Dryer Operation	18
Power Up Mode.....	18
Ready Mode.....	18
Partial Vend Mode.....	18
Additional Vend Mode.....	18
Start Mode.....	18
Entering Coins.....	18
Entering Cards.....	18
Changing Active Cycles.....	18
Opening the Dryer Door.....	18
Signals.....	19
Extended Tumble Mode.....	19
Special Features	20

© Copyright 2022, Alliance Laundry Systems LLC

All rights reserved. No part of the contents of this book may be reproduced or transmitted in any form or by any means without the expressed written consent of the publisher.

Programming Control.....	20
Collecting Audit Information.....	20
Testing Machine and Control Functions.....	20
Rapid Advance Feature.....	20
Clearing the Vend Feature.....	20
Communications Mode.....	20
Coin Drop.....	20
Start Pulse Operation.....	20
Service Door and Coin Vault Openings.....	20
Special Vend.....	21
OPL Mode.....	21
Drop-Off Mode.....	21
Low Power/Auto-Shutdown Option.....	21
Opening the Service Door.....	22
Stacked Washers and Dryers, Stacked Dryers, Front Control Dryers, and Coin Rear Control Dryers.....	22
Rear Control Dryers with Card Reader.....	22
Entering the Manual Mode.....	23
How to Enter the Manual Mode.....	23
How to Exit Programming Feature.....	24
Programming Control.....	25
What Can Be Programmed?.....	25
Programmable Options Available.....	25
Heat Vend Price AtS H Changing Vend Price	36
No Heat Vend Price AtS nH	37
Cycle Time CyCt-	37
Top-Off Data toP-	37
Vend Price Decimal Point Ats dP	38
Coin #1 Value dEn 1	38
Coin #2 Value dEn 2	39
Start Pulse Value PULSE	39
Start Pulse Mode PLSNod	39
Programmable Output Type AtyPE	40
Default Cycle dFtCyC	40
How to Read Default Cycle Value Table.....	41
Card Reader Display Control CARd	41
Audio Signal AUdio	41
How to Program the Audio Signal.....	41
How to Read Signal Value Table.....	42
Network Node Number nodeE	43
Error Code Programming Error-	43
Cool Down Time Cdt -	44
Time Display Format t d F	45
Temperature tENP-	45
Temperature (Fahrenheit/Celsius) tP F C	46
Set Real-Time Clock rtC -	46

Daylight Savings Time Parameters dLS-	47
Special Vend 1 Parameters SP1-	47
How to Program Special Vend 1 Days Enable SP1 01	47
How to Read Special Vend Value Table.....	47
How to Program Special Vend 1 Start Minute SP1 2	52
How to Program Special Vend 1 Start Hour SP1 3	52
How to Program Special Vend 1 Start Date SP1 4	52
How to Program Special Vend 1 Start Month SP1 5	53
How to Program Special Vend 1 Start Year SP1 6	53
How to Program Special Vend 1 Length in Hours SP1 7	53
How to Program Special Vend 1 End Date SP1 8	53
How to Program Special Vend 1 End Month SP1 9	53
How to Program Special Vend 1 End Year SP1 10	54
How to Program Special Vend 1 Heat Cycle Vend Price SP1 11	54
How to Program Special Vend 1 Heat Cycle Time Minutes SP1 12	54
How to Program Special Vend 1 Heat Cycle Time Seconds SP1 13	54
How to Program Special Vend 1 No Heat Cycle Vend Price SP1 14	54
How to Program Special Vend 1 No Heat Cycle Time Minutes SP1 15	55
How to Program Special Vend 1 No Heat Cycle Time Seconds SP1 16	55
How to Program Special Vend 1 Coin Topoff Time Minutes SP1 17	55
How to Program Special Vend 1 Coin 1 Topoff Time Seconds SP1 18	55
How to Program Special Vend 1 Coin 2 Topoff Time Minutes SP1 19	55
How to Program Special Vend 1 Coin 2 Topoff Time Seconds SP1 20	56
How to Program Special Vend 2 Days Enable SP2	56
How to Program Special Vend 3 Days Enable SP3	56
How to Program Special Vend 4 Days Enable SP4	56
Low Power-Auto Shutdown 1 Days Enable LPAS 1	57
Low Power-Auto Shutdown 2 Days Enable LPAS 2	57
Low Power-Auto Shutdown 3 Days Enable LPAS 3	57
Low Power-Auto Shutdown 4 Days Enable LPAS 4	57
Power Fail Reset PF rst	58
How to Read Power Fail Reset Table.....	58
IR Access (On/Off) irA En	58
Manual Rapid Advance rAPdEn	59
Manual Diagnostics diAgEn	59
Factory Test Cycle (On/Off) Ft En	59
Lucky Cycle LUC-	59
Heating Indicator Decimal Point Ht dP	60
Programmable Close Door-Lid Display PCdL d	60
Programmable Push Start Display PPSd d	60
Programmable Open Door Display PodL d	60
Vend Price Display Override AtS do	61
OPL Parameters oPL-	61
Drop Off Mode (On/Off) droP	61
Out of Order (On/Off) oUt	61

Collecting Audit Information..... 63

How to Enter Audit Feature.....	63
Entering the Audit Feature by Manual Mode.....	63
Entering the Audit Feature with the Coin Vault Open.....	63
How to Read Audit Data.....	63

How to Exit Audit Feature.....	63
Manual Reset.....	64
How to Enter Manual Reset.....	64
Testing Machine and Electronic Control Functions.....	65
How To Enter Testing Feature.....	65
How to Start Tests.....	65
How to Exit Testing Feature.....	65
Diagnostic Test Descriptions.....	68
Control Software Version Number Test.....	68
Input/Output Board Software Version Number Test.....	68
Service Door Opening Test.....	68
Coin Vault Opening Test.....	68
Coin Drop #1 Input Test.....	68
Coin Drop #2 Input Test.....	68
Vend Header Present Status Test.....	68
Start Pulse Test.....	69
Dryer-on Temperature Test.....	69
Door Switch Input Test.....	69
Thermistor Temperature Test.....	69
Machine Configuration Display #1 Test.....	69
Machine Configuration Display #2 Test.....	70
Machine Configuration Display #3 Test.....	70
Machine Configuration Display #4 Test.....	70
Machine Configuration Display #5 Test.....	70
Factory Test Cycle.....	70
To Enter Factory Test Cycle.....	70
To Exit Factory Test Cycle.....	70
Error Codes.....	73
Rapid Advance Feature.....	76
How to Enter Rapid Advance from Ready Mode.....	76
How to Enter Rapid Advance During an Active Cycle.....	76
How to Exit Rapid Advance Feature.....	76
Clear Vend Feature.....	77
How to Clear Vend.....	77
Power Fail Recovery.....	78
Power Fail Reset Disabled.....	78
Power Fail Reset Enabled.....	78
Communications Mode.....	79
Infra-red Communications.....	79
How to Begin Communications with an External Device.....	79

Card Reader Communications (Card Models Only)..... 79
Network Communications..... 79

Model Identification (Table 1 of 2)

Information in this manual is applicable to these dryer models:

NT2JGASP403UG01	SD3NXAGS403UG01	SDGNGBGS303UG01	ST2JGASP403UG01
NT3JGASG403UG01	SD3NXAGS403UN01	SDGNLBGS303UG01	ST2JGASP403UN01
NT3JGASP403NG22	SDEJXAGS553UG16	SDGNXAGS303EG01	ST3JGAJP403UG43
NT3JGASP403UG01	SDENGBGS303UG01	SDGNXAGS303UG01	ST3JGASG403UG01
SD3NGBGS403UG01	SDENGBGS543ZG01	SS3NGAGS403UG01	ST3JGASP403NG22
SD3NGBGS403UN01	SDENLBGS303UG01	SS3NLAGS403UG01	ST3JGASP403UG01
SD3NLBGS403UG01	SDENLBGS543ZG01	SSGNGAGS303UG01	ST3JGASP403UN01
	SD3NLBGS403UN01	SDENXAGS303UG01	SSGNLAGS303UG01

Table 1

Model Identification (Table 2 of 2)

Information in this manual is applicable to these dryer models:

BD3NGBGS403UW01	NT2JLASP403UN01	SDGNCAGS113TW01	SSLWXAGS303NN22
BD3NGBSS403UN01	NT2JLASP403UW01	SDGNCRGS113TW01	ST1JXASP403EW06
BD3NLBGS403UW01	NT2JLASP403UW06	SDGNCRGS113TW02	ST2JXASP403EW06
BD3NLBSS403UN01	NT2JXASP403UN01	SDGNEAGS113CW01	ST3JXASP403NW22
BD3NXAGS403UW01	NT2JXASP403UW06	SDGNERGS113CW02	STENCASP173TW01
BD3NXFGS403UW01	NT3JLASG403UW01	SDGNXAGS113CN01	STENCASP175TW01
BDGNGBGS303EW01	NT3JLASP403NN22	SDGNXAGS113CW01	STENCFSP173TW01
BDGNLBGS303EW01	NT3JLASP403NW22	SDGNXAGS123DW01	STENCFSP175TW01
BDGNXAGS303EW01	NT3JLASP403UN01	SDGNXAGS133DW01	STENEASP283CW01
BDGNXFGS303EW01	NT3JLASP403UW01	SDGNXAGS303AW01	STENEASP285CW01
BT3JGAJG403UW01	NT3JXASG403UW01	SDGNXRGS113CW02	STENEASP293CW01
BT3JGAJG403UW06	NT3JXASP403NW22	SDGNXRGS113TW01	STENEASP295CW01
BT3JGAJP403UN01	NT3JXASP403UN01	SDGNXRGS113TW02	STENXASP133DW01
BT3JGAJP403UN06	NT3JXASP403UW01	SDGNXRGS303AW01	STENXASP173TW01
BT3JGAJP403UW01	NTHJXASP543NW01	SDGNYAGS113CW01	STENXASP175TW01
BT3JGAJP403UW06	NTHJYASP543NW01	SDGNYAGS113TN01	STENXASP283CW01
BT3JGASG403UW01	NTLJXASP543NN23	SDGNYAGS113TW01	STENXASP285CW01
BT3JGASG403UW06	NTLJYASP543NN23	SDGNYBGS113TN01	STENXASP293CW01
BT3JGASP403UN01	PDEJGBGS303UG01	SDGNYBGS113TW01	STENXASP295CW01
BT3JGASP403UN06	PDEJGBGS543ZG01	SDGNYRGS113CW01	STENXASP433AW01
BT3JGASP403UW01	PDGJGBGS303UG01	SDGNYRGS113TW01	STENXASP433AW12
BT3JGASP403UW06	PDGJGBGS543ZG01	SDGWCAGS113TW41	STENXASP433LW01
BT3JLASG403UW01	PDGJXAGS303UG01	SDGWCRCGS113TW42	STENXASP543DN01
BT3JLASG403UW06	PDGJXAGS543ZG01	SDGWXAGS113TW01	STENXASP543DW01
BT3JLASP403UN01	PS3JGAGS403UG01	SDGWXRGS113TW02	STENXASP543RW01
BT3JLASP403UN06	PS3JXAGS403UG01	SDGWYAGS113TW01	STENXFSP173TW01
BT3JLASP403UW01	PSGJGAGS303UG01	SDGWYAGS113TW41	STENXFSP175TW01
BT3JLASP403UW06	PSGJGAGS543ZG01	SDGWYRGS113TW01	STENYASP173TN01
BT3JXASG403UW01	PSGJXAGS303UG01	SDGWYRGS113TW41	STENYASP173TW01
BT3JXASG403UW06	PSGJXAGS543ZG01	SDLNXRGS303LW01	STENYASP175TN01
BT3JXASP403UN01	PT2JGAJG403UG06	SDLNXRGS543NW23	STENYASP175TW01

Table 2 continues...

BT3JXASP403UN06	PT2JGAJP403UG06	SDLNXRGS543PW01	STENYASP283CW01
BT3JXASP403UW01	PT2JGASG403UG06	SSENCAGS153TW01	STENYASP285CW01
BT3JXASP403UW06	PT2JGASP403UG06	SSENCAGS173TN01	STENYASP293CW01
HDENEAGS153CW01	PT2JXASG403UG06	SSENCAGS173TW01	STENYASP295CW01
HDENEAGS173CW01	PT2JXASP403UG06	SSENCAGW153TW01	STENYFSP173TW01
HDENERGS153CW01	PT3JGAJG403UG06	SSENCAGW173TW01	STENYFSP175TW01
HDENERGS173CW01	PT3JGAJP403UG06	SSENCFGW153TW01	STEWCAASP175TW41
HDENXAGS153CW01	PT3JGASG403UG06	SSENCFGW173TW01	STEWCFSP175TW41
HDENXAGS173CN01	PT3JGASP403UG06	SSENEAGW283CW01	STEWXASP173TW01
HDENXAGS173CW01	PT3JXASG403UG06	SSENEAGW293CW01	STEWXASP175TW01
HDENXAGS543DW01	PT3JXASP403UG06	SSENXAGW173TW01	STEWXASP285CW01
HDENXAGW173CN01	PTEJXASG303UG06	SSENXAGW283CW01	STEWXASP295CW01
HDENXRGS153CW01	PTEJXASP303UG06	SSENXAGW293CW01	STEWXASP453NN22
HDENXRGS173CW01	PTGJXASG303UG06	SSENXAGW433AW01	STEWYAJP303NN22
HDENYAGS153CW01	PTGJXASP303UG06	SSENXAGW433LW01	STEWYAJP303NW22
HDENYAGS173CW01	SDENCAGS173TN01	SSENXAGW543DW01	STEWYASP173TW01
HDENYBGS173CW01	SDENCAGS173TW01	SSENXFGW293CW01	STEWYASP175TW01
HDENYRGS153CW01	SDENCRGS153TW01	SSENYAGS153TW01	STEWYASP175TW41
HDENYRGS173CW01	SDENCRGS173TW01	SSENYAGS173TN01	STGNCASP113TW01
HDGNEAGS113CW01	SDENCRGS173TW02	SSENYAGS173TW01	STGNCASP115TW01
HDGNERGS113CW01	SDENEAGS153CW01	SSENYAGW173TW01	STGNCFSP113TW01
HDGNXAGS113CN01	SDENEAGS173CW01	SSENYAGW283CW01	STGNCFSP115TW01
HDGNXAGS113CW01	SDENERGS153CW02	SSENYAGW293CW01	STGNEASP093CW01
HDGNXAGS123DW01	SDENERGS173CW02	SSENYFGW173TW01	STGNEASP095CW01
HDGNXAGS543DW01	SDENXAGS153CW01	SSEWCAGW173TW41	STGNXASG113JW01
HDGNXAGW113CN01	SDENXAGS173CN01	SSEWCFGW173TW41	STGNXASG113TW01
HDGNXRGS113CW01	SDENXAGS173CW01	SSEWXAGS153TW01	STGNXASG115TW01
HDGNYAGS113CW01	SDENXAGS433AW01	SSEWXAGS173TW01	STGNXASP093CW01
HDGNYBGS113CW01	SDENXAGS543DW01	SSEWXAGW173TW01	STGNXASP095CW01
HDGNYRGS113CW01	SDENXAGS543RW01	SSEWYAGS153TW01	STGNXASP113TW01
HSENXAGW283CW01	SDENXRGS153CW02	SSEWYAGS173TW01	STGNXASP115TW01
HSENXAGW293CW01	SDENXRGS173CW02	SSEWYAGW173TW01	STGNXASP123DW01
HSENXAGW543DW01	SDENXRGS173TW01	SSEWYAGW173TW41	STGNXASP303AW01
HSENXFGW293CW01	SDENXRGS173TW02	SSEWYFGW173TW01	STGNXASP303AW12

Table 2 continues...

HSENYAGW283CW01	SDENXRGS433AW01	SSEWYFGW173TW41	STGNXASP543DN01
HSENYAGW293CW01	SDENXRGS433LW01	SSGNCAGS113TN01	STGNXASP543DW01
HSENYFGW283CW01	SDENYAGS153CW01	SSGNCAGS113TW01	STGNXFSP113TW01
HSGNXAGW093CW01	SDENYAGS153TW01	SSGNCAGW113TN01	STGNXFSP115TW01
HSGNXAGW123DW01	SDENYAGS173CW01	SSGNCAGW113TW01	STGNYASP093CW01
HSGNXAGW543DW01	SDENYAGS173TN01	SSGNCFGW113TW01	STGNYASP095CW01
HSGNXFGW093CW01	SDENYAGS173TW01	SSGNEAGW093CW01	STGNYASP113TN01
HSGNYAGW093CW01	SDENYBGS173TN01	SSGNXAGW093CW01	STGNYASP113TW01
HSGNYFGW093CW01	SDENYBGS173TW01	SSGNXAGW113TW01	STGNYASP115TN01
HTENXASP133DW01	SDENYRGS153CW01	SSGNXAGW123DW01	STGNYASP115TW01
HTENXASP283CW01	SDENYRGS153TW01	SSGNXAGW303AW01	STGNYFSP113TW01
HTENXASP285CW01	SDENYRGS173CW01	SSGNXAGW543DW01	STGNYFSP115TW01
HTENXASP293CW01	SDENYRGS173TW01	SSGNXFGW093CW01	STGNZASP113NW22
HTENXASP295CW01	SDENYRGS303NW22	SSGNYAGS113TN01	STGWCASP115TW41
HTENXASP543DW01	SDENYRGS303ZW01	SSGNYAGS113TW01	STGWCASP115TW41
HTENYASP283CW01	SDEWCAGS173TW41	SSGNYAGW093CW01	STGWXASP095CW01
HTENYASP285CW01	SDEWCRGS153TW42	SSGNYAGW113TN01	STGWXASP113TW01
HTENYASP293CW01	SDEWCRGS173TW42	SSGNYAGW113TW01	STGWXASP115TW01
HTENYASP295CW01	SDEWXAGS153TW01	SSGNYFGW113TW01	STGWYAJP303NN22
HTGNXASP093CW01	SDEWXAGS173TW01	SSGWCAGW113TW41	STGWYASP113TW01
HTGNXASP095CW01	SDEWXRGS153TW02	SSGWCAGW113TW41	STGWYASP115TW01
HTGNXASP123DW01	SDEWXRGS173TW02	SSGWCAGW113TW01	STGWYASP115TW41
HTGNXASP543DW01	SDEWYAGS153TW01	SSGWCAGW113TW01	STLNXASP303LW01
ND3NLBGS403NW22	SDEWYAGS153TW41	SSGWYAGS113TW01	STLNXASP543NW23
ND3NLBGS403ZW01	SDEWYAGS173TW01	SSGWYAGW113TW01	STLNYASP543NW23
ND3NLBSS403UN01	SDEWYAGS173TW41	SSGWYAGW113TW41	STLNYASP543PW01
ND3NXASS403UN01	SDEWYRGS153TW01	SSGWYFGW113TW01	STLWXASP303NN22
NDENXAGS303UW01	SDEWYRGS153TW41	SSGWYFGW113TW41	STLWXASP543NN22
NDGNXAGS303EW01	SDEWYRGS173TW01	SSLNXAGW303LW01	TD3NGBGS403NW36
NT1JLASP413UW06	SDEWYRGS173TW41	SSLNXAGW543NW23	TT3JGASP403NW36
NT1JXASP403UW06	SDGNCAGS113TN01	SSLNXAGW543PW01	TT3JXASP403NW22

Table 2

Preliminary Information

About the Control

This control is an advanced, programmable computer that lets the owner control machine features by pressing a sequence of SELECT CYCLE pads. Refer to *Figure 1*.

The control allows the owner to program custom cycles, set vend prices, retrieve audit information, run diagnostic tests, program special vend features and other programmable features. Refer to Programming Control for a list of features. Dryers shipped from the factory have a default cycle (MED TEMP) built in. However, the owner can change the default cycle, or any cycle, as needs permit.

IMPORTANT: In the event of a power failure, the control will not have to be reprogrammed. It is designed with a memory system that will remember how it was programmed (for up to 10 years) until the electrical power is restored.

IMPORTANT: It is extremely important that the dryer has a positive ground and that all mechanical and electrical connections to the control are made before applying power to or operating the dryer.

Glossary of Terms

The following are a few terms and abbreviations to learn. These are referred to throughout the instructions.

Display – This term refers to the window area of the control that displays words and values.

LED (Light Emitting Diode) – This term refers to the lights next to the keypads and status words of the control.

IrDA – Infra-red External Device

FEC – Front End Control

I/O Board – Input/Output Board

OPL – On Premises Laundry

Power Failure Recovery

If a cycle is in progress and the power fails, the cycle status is saved in memory. When the power recovers, the dryer will resume into the previously active cycle (if so programmed by the owner), by pressing the START pad. If the power failure occurs while the control is in a fatal error mode, it will return to Ready Mode upon recovery.

The owner may program a special feature called POWER FAIL RESET which sets a maximum power failure duration before vend is entered and cycle progress is lost. To program this feature, refer to *Power Fail Reset PF rst*.

If the length of the power failure is greater than the POWER FAIL RESET time, the control will end the cycle and the display will revert back to the Ready Mode rather than resume the previously active cycle. If the length of the power failure is less than the POWER FAIL RESET time and the power failure is greater than 2 seconds, or the POWER FAIL RESET is turned off, the dryer will enter START mode.

Communications

The control may be programmed manually, by infra-red communication with an external device or by the network. A limited number of features can be programmed by a card reader.

The control may be programmed manually or by infra-red communication with an external device. A limited number of features can be programmed by a card reader.

The control may be programmed manually. A limited number of features can be programmed by a card reader.

The control may be programmed manually or by infra-red communication with an external device.

An external device, such as a PDA, allows the owner to program and retrieve information from the control without touching the keypad. An external device greatly expands the programming options available to the owner. However, it is not required to program and operate the machine. The operation of an external device and the advanced features available are covered separately in the instructions included with the external device software. Contact Alliance Laundry Systems for a list of approved PDAs and other external devices.

Infra-red Communications

An external device, such as a PDA, allows the owner to program and retrieve information from the control without touching the keypad. An external device greatly expands the programming options available to the owner. However, the external device is not required to program and operate the machine. The operation of an external device and the advanced features available are covered separately in the instructions included with the external device software. Contact Alliance Laundry Systems for a list of approved PDAs and other external devices.

Serial Card Reader Communications (Card Models Only)

The control will accept communication with a serial card reader in order to perform vending transactions when a card is inserted to pay for cycles. The card reader can also allow the owner to program a limited number of features and collect audit information.

For detailed information on serial card reader communications, refer to instructions included with card reader.

Network Communications

Network communication is available on models with Serial Numbers beginning 1706.

Network communications allow an owner to program, collect data and run diagnostics on any machine.

Control Identification

SELECT CYCLE Pads

(Refer to *Figure 1*)

SELECT CYCLE pads are used to select the specific dryer cycle and temperature. These pads include HIGH TEMP, MED TEMP, LOW TEMP, DELICATES and NO HEAT. The selection of one of these cycles will light up the corresponding LED. The factory default cycle is MED TEMP.

START Pad

(Refer to *Figure 1*)

The START pad is used to start the dryer after the full vend price has been satisfied and the dryer door is closed.

Both the START pad and the SELECT CYCLE pads are used in various combinations for programming cycles, retrieving audit information, running diagnostic tests, and other operations. During an active cycle (card reader equipped machines only), the START pad may be pressed (with a card inserted) to add time to a cycle.

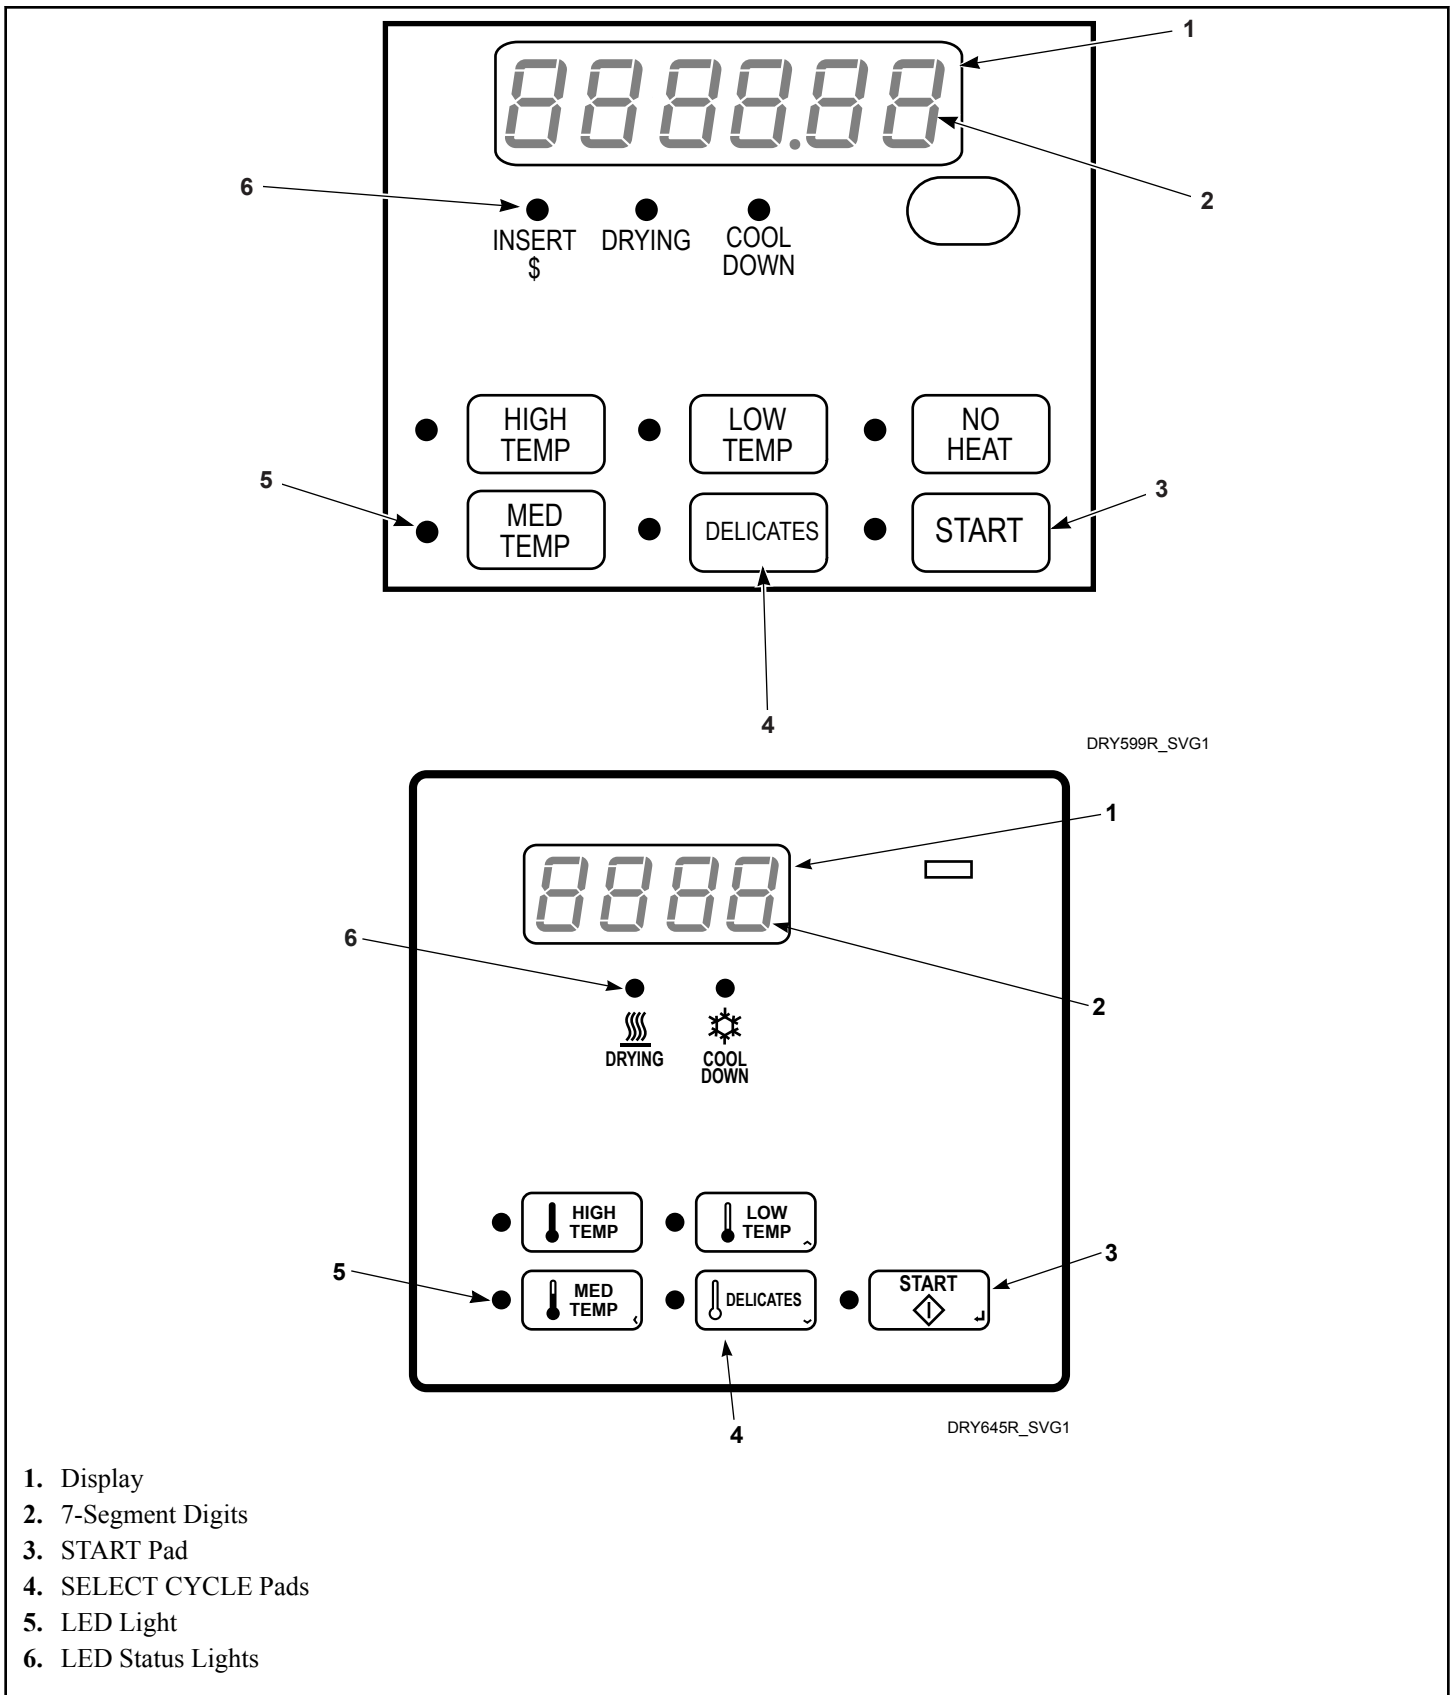


Figure 1

Display Identification

Light Emitting Diodes (LEDs)

LIGHT EMITTING DIODES (LEDs) are used to indicate the chosen cycle and cycle status. See below for information on each LED.

INSERT COINS/CARD LED

The INSERT COINS/CARD LED is lit to prompt the user to insert coins or a card to satisfy the vend price for the chosen cycle. The LED is lit during the Ready Mode and Partial Vend Mode. During Additional Vend, the LED flashes one second on and one second off. The INSERT COINS/CARD LED will shut off when the coin vend price has been satisfied or a card has been inserted.

START LED

The START pad LED flashes one second on and one second off whenever the dryer is not in a cycle, the full vend price has been satisfied, and the dryer door is closed. When the START pad is pressed, the cycle will begin or resume. The START LED will shut off when the START pad is pressed. The START LED will also flash any time a card is inserted to add time to the current cycle.

DRYING LED

The DRYING LED is lit to indicate that one of the heated cycles (HIGH TEMP, MED TEMP, LOW TEMP, DELICATES) is currently in operation. The DRYING LED goes off at the end of a heated cycle, if the heated cycle is changed to a NO HEAT cycle, or when the COOL DOWN cycle begins.

COOL DOWN LED

The COOL DOWN LED is lit whenever the COOL DOWN portion of a heated cycle is active. It is also lit when the NO HEAT cycle is in operation. The COOL DOWN LED will shut off when a cycle ends or more time is added, pushing the cycle back into the heated portion of a cycle.

Six 7-Segment Digits

The 7-SEGMENT DIGITS are used to display the time remaining in a cycle, vend price, error messages and descriptive codes. During diagnostic testing or manual programming of the control, these digits will display descriptive codes and values (as described in *Entering the Manual Mode*).

Dryer Operation

Power Up Mode

When power is applied to the dryer, the control becomes active. This mode sets the next mode before enabling power failure detection.

Ready Mode

In Ready Mode, the display shows the currently selected cycle, the full vend price is displayed and the INSERT COINS/CARD LED is lit (if enabled).

The user may select a different cycle, if desired. If the vend price is not satisfied within 4.25 minutes, the dryer control will return to the Ready Mode. The display will continue to show the remaining vend needed to start a cycle.

Partial Vend Mode

The control enters this mode when part of the vend price has been entered, but not enough vend is entered to satisfy the vend price. The control will display the remaining vend price needed to start the cycle and the INSERT COINS/CARD LED is lit.

Additional Vend Mode

The control enters this mode if the cycle is changed to a cycle that requires more money. The additional vend price will flash one second on and one second off until a coin is entered, a start pulse is entered or a vend payment is received. If the vend price is not satisfied within 60 seconds or the door is opened, the control will go back to the first selection and the cycle will continue.

Start Mode

Vends may be satisfied by a coin drop, start pulses, or by a third party card reader. If a coin drop is used, the remaining vend price will decrease with each coin entry. If start pulses are used, the remaining vend price will decrease with each received pulse. Once the vend is satisfied, the START LED will begin to flash and signal will sound for ten seconds. If a third party card reader is used, the START LED will begin to flash when a valid cash card is entered into the reader.

When the START keypad is pressed, the dryer will start. The START LED will stop flashing and either the DRYING LED or the COOL DOWN LED will be lit. The display will change to show the remaining cycle time on the display. The DRYING LED will be lit during the heat portion of a heat cycle. The COOL DOWN LED will be lit during the cool down portion of a heat cycle and during an entire no heat cycle.

When a cycle is complete, the display will show **00** until the door is opened, a key is pressed, a coin or card is entered, or a start

pulse is received. When any of the above happens, the display will revert back to the Ready Mode.

Entering Coins

Coins are entered to satisfy the programmed vend price for a selected cycle. Coins may be entered before selecting a cycle or during an active cycle. When coins are entered during an active cycle, the time remaining is increased by the amount programmed by the owner. Refer to Programming Control section.

The owner may choose to add additional time for each coin entered. If coins are entered for an active cycle currently in the COOL DOWN Mode, coins entered may push the cycle back into the DRYING Mode. The maximum time for any cycle is 99 minutes.

Entering Cards

A card is entered to satisfy the programmed vend price for a selected cycle. The card may be entered before selecting a cycle or during an active cycle. When the card is entered during an active cycle and the START keypad is pressed, the time remaining is increased by the amount programmed by the owner. Refer to Programming Control Section.

The owner may choose to add additional time by deducting a vend from the card or may require an additional full vend price be deducted from the card. If vend is deducted during an active heated cycle that is currently in the COOL DOWN Mode, the additional time added may put the cycle back into the DRYING Mode. The maximum time for any cycle is 99 minutes. Additional time cannot be added if it exceeds the 99 minute limit on a drying cycle.

Changing Active Cycles

In OPL machines, the active cycle may be changed at any time during dryer operation. In vend machines, the active cycle may be changed in the first five minutes for more expensive cycles. Cycles that are the same price or less expensive can be chosen anytime. In the last five minutes, a cycle can be changed with no change to vend or time remaining.

Opening the Dryer Door

Opening the dryer door in a running cycle will automatically stop the cycle. When the dryer door is opened, the DRYING LED or COOL DOWN LED is turned off.

Once the dryer door is closed, the START pad LED flashes at one second intervals until the START pad is pushed. Pressing the START pad will start or resume the active cycle.

Signals

There are five four instances when a signal may sound during dryer operation. The owner may program the signal to be turned on or off (refer to *Audio Signal AUdio*). These five four instances are listed below:

1. End of Cycle Signal

By default, this signal is turned off. If turned on, the signal will sound for three seconds at the end of a cycle.

2. Keypad Depression Signal

The signal will sound for a quarter of a second each time a keypad is pressed.

3. Coin Input/Start Pulse Input/Card Insertion Signal

The signal will sound for a quarter of a second each time a coin or start pulse is received or a card is entered.

4. Serial/Network Command Signal

This signal will sound for a quarter of a second each time the control receives a valid serial or network vend command.

5. Signal for Start

This signal will sound one second on and one second off for 10 seconds when START LED is flashing after vend has been satisfied.

Extended Tumble Mode

The control enters Extended Tumble Mode twenty minutes after a cycle has ended. The signal will sound one second on and one second off for five seconds and then continuously for five seconds before starting the extended tumble, which is disabled by default. Extended Tumble Mode ends with any user interaction.

Special Features

Programming Control

The control allows the dryer owner to program the control with the use of the keypad. Cycle and vend information may be programmed, audit information may be viewed and diagnostic tests may be run by pressing keypad combinations.

For details on programming cycle and vend information, refer to **Programming Control**.

Collecting Audit Information

The control will store audit information in its memory that can be retrieved by pressing various keypad combinations. The control will record coins entered, total machine cycles, top-offs, and total start pulses.

For more information on the audit features, refer to *Collecting Audit Information*.

NOTE: Additional audit information is retrievable with an external device, a card reader or a network. Refer to the appropriate instruction manual.

Testing Machine and Control Functions

Special programmable diagnostic features built into the control allow the owner to run specific diagnostic tests. By opening and closing the service door, with coin vault closed, and then pressing various sequences of keypads, the owner may retrieve and perform the following tests:

- Control Software Version Number
- Input/Output Board Software Version Number
- Service Door Opening Test
- Coin Vault Opening Test
- Coin Drop #1 Input Test
- Coin Drop #2 Input Test
- Vend Header Present Status Test
- Start Pulse Test
- Dryer-on Temperature Test
- Door Switch Input Test
- Thermistor Temperature Test
- Machine Configuration #1 Display Test
- Machine Configuration #2 Display Test
- Machine Configuration #3 Display Test
- Machine Configuration #4 Display Test
- Machine Configuration #5 Display Test

For detailed information on running diagnostic tests, refer to *Testing Machine and Electronic Control Functions*.

Rapid Advance Feature

This feature allows the user to quickly advance through an active dryer cycle or advance into a cycle from the Ready Mode. This feature is useful when tests must be performed immediately on a dryer currently in an active cycle. In this case, the user can quickly advance through the cycle to the Ready Mode. At this point, the user can perform the required tests and then return the dryer to the active cycle.

For detailed information on using the Rapid Advance feature, refer to Rapid Advance Feature.

Clearing the Vend Feature

This feature allows the user to return the control back to the Ready Mode if coins have been entered but the full vend price has not yet been satisfied, while in Partial Vend Mode.

For more information on using the Clear Vend feature, refer to *Clear Vend Feature*.

Communications Mode

This feature allows the dryer control to communicate with an external device, a card reader or a network. This allows the dryer control to be programmed and have its data read without using the keypad.

For more detailed information on using the Communications Mode feature, refer to **Communications Mode** section.

Coin Drop

The control will accept pulses from a single or dual coin drop to satisfy vend price. Each coin drop will have the ability to satisfy the vend.

Start Pulse Operation

The control will accept pulses from optional payment systems. The machine can be programmed to receive a single start pulse or multiple start pulses, or the Start Pulse Option can be turned off. The Start Pulse Mode allows the machine to go from the Ready Mode to the Start Mode after a single or multiple pulses are received.

Service Door and Coin Vault Openings

The control will capture the times and dates of the last seven openings of the Coin Vault and the Service Door. The information is saved in memory. An open service door and a closed coin vault combined with various keypad presses allows the control to enter manual modes of operation if the Break-In Alarm is not on. These modes include Manual Programming, Audit Collection, Diagnostics, Rapid Advance, and Reset to Factory Defaults.

Special Vend

This feature allows the owner to program the control to allow programmable vend prices for specific hours and dates.

OPL Mode

This feature allows the user to start a cycle without satisfying the vend price.

Press the START keypad to add time to the cycle. Press the LOW TEMP and DELICATES keypads to end the cycle.

Drop-Off Mode

This feature allows the owner to limit machine use to an attendant without requiring vend. Starting the machine will require the correct sequence of four keypad presses as programmed by an external device or a network.

Press the START keypad to add time to the cycle. Press the LOW TEMP and DELICATES keypads to end the cycle.

Low Power/Auto-Shutdown Option

This feature allows the owner to program the control to shut down or enter a low power consumption mode based on programmable times and dates if either of these options are enabled.

Opening the Service Door

Stacked Washers and Dryers, Stacked Dryers, Front Control Dryers, and Coin Rear Control Dryers

Models through Serial No. 181000001

Manual programming requires the user to open and close the service door. Opening and closing the service door trips a switch allowing access to various programming options, diagnostics, and audit capabilities. On coin models, the coin vault switch must be closed to enter Manual Mode.

Models starting Serial No. 181000001

Manual programming requires the user to unplug the bullet connector located between the “white/black” and “red/blue” wires. Reconnect the connector for normal operation.

After opening and closing the service door or unplugging the bullet connector, the programmer has 4.25 minutes to begin programming.

Refer to *Figure 2* for locating the service door.

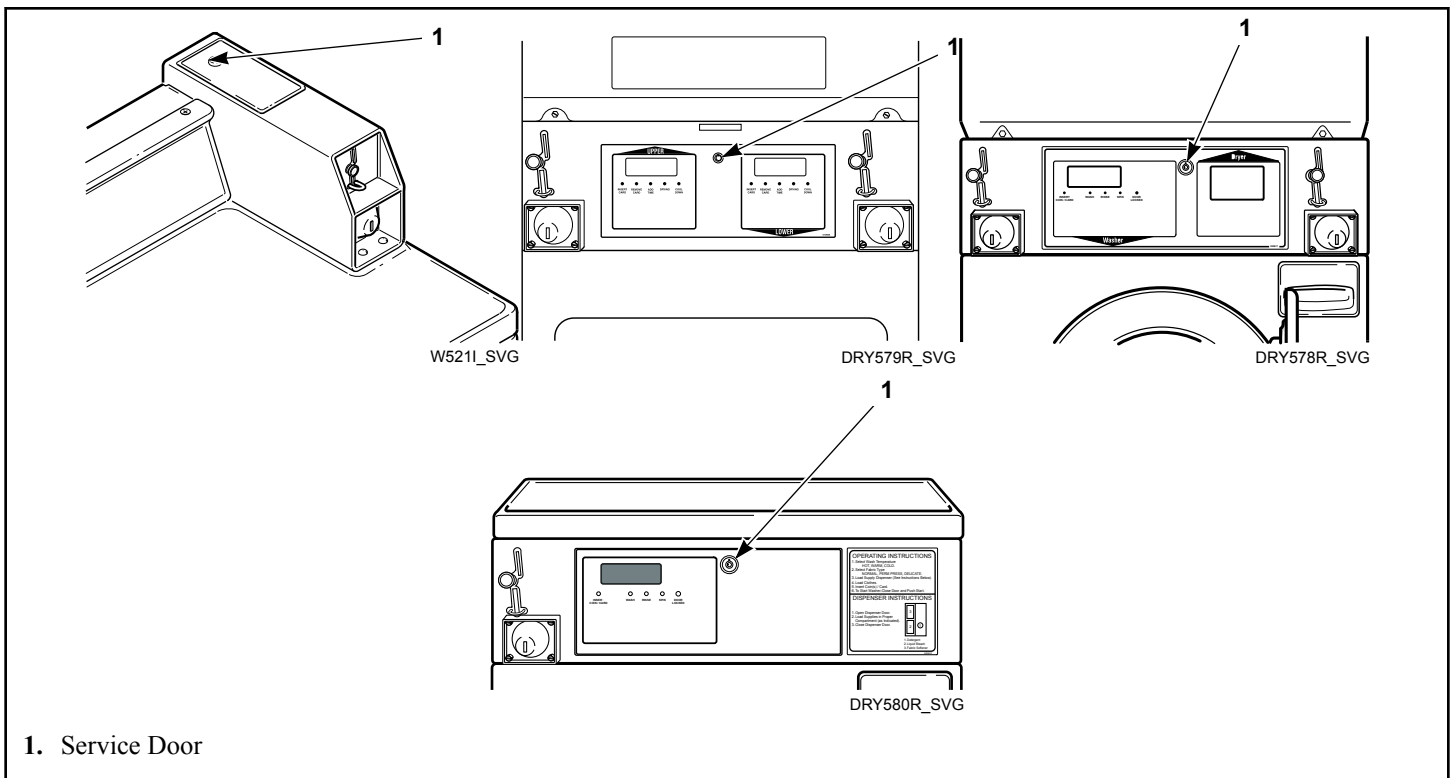


Figure 2

Rear Control Dryers with Card Reader

Manually programming the control requires the user to remove the control panel and unplug the bullet connector located between the “white/black” and “red/blue” wires or to insert an appropriate card into the reader. This will allow the user to access various programming options, diagnostics and audit capabilities. The control panel is located on the control hood. Refer to *Figure 2*.

Entering the Manual Mode

For programming, testing, and retrieving information from the control, it is often necessary to enter the Manual Mode by following the steps below.

For an overview of entering the Manual Mode, refer to the flow-chart.

How to Enter the Manual Mode

1. If accessing Diagnostic Tests, be sure the dryer is in the Ready Mode before continuing to step 2. If the dryer is in an active cycle, rapid advance through the cycle. Refer to *How to Enter Rapid Advance During an Active Cycle*. If coins or a card has been entered, refer to Clear Vend Feature.
2. Coin Models through Serial No. 1810000001 – Open the service door. The coin vault switch must be closed to enter the Manual Mode.
3. All Other Models: Unplug bullet connector.
4. While pressing and holding the HIGH TEMP keypad with one hand, press the MED TEMP keypad with the other hand.
5. The display will show **rAP id**.
6. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the options until the desired option appears in the display.
7. Press the START (enter) keypad to enter the displayed mode.
8. To exit, press the MED TEMP (<) keypad. The control will revert back to Ready Mode.

Manual Programming can only be turned on or off with an external device or a network. Refer to the appropriate instruction manual. Manual Rapid Advance and Diagnostics can be turned on and off using an external device by manual programming (refer to *IR Access (On/Off) irA En* or *Manual Rapid Advance rAP-dEn*), or with the network.

By default, Manual Programming is turned on.

The manual features available in each group are as follows (the menu displayed on the display in this mode is in parenthesis).

Rapid Advance (**rAP id**)

Manual Programming (**Pr o g**)

Manual Read Audit (**RUd it**)

Manual Reset (**rESEt**)

Diagnostic Tests (**d iAG**)

If a manual parameter is turned off or unavailable (i.e. attempting to enter diagnostics while a cycle is running), the display will change from the selected feature to **oFF**, an audio signal will sound for one second and the features in the parameter cannot be entered. The display will then return to the selected feature.

Programming Control

What Can Be Programmed?

This feature allows the owner to program cycle parameters, standard vend pricing, special vends, and other features by using the keypads. The control must have the Manual Programming Mode enabled, which is the factory default. This mode can only be turned OFF and ON by using an external device or a network. Refer to this section when programming the control.

This feature allows the owner to program cycle parameters, standard vend pricing and other features by using the keypads.

This section offers a detailed description of all available programmable options.

Each description includes instructions on when and why the option might be used and, more importantly, how to program the option.

For an overview of the programming organization, refer to the flowcharts.

For more advanced users, a quick reference list of the options available through the programming mode is located on this page.

NOTE: The codes in the Option Display column of the Programmable Options List are what will show in the display when that option is selected.

Programmable Options Available

Option Number	Option Display	Description	Default Value	Value Range
1	HE5 H	Heat Vend Price	200	0-65535
2	HE5 nH	No Heat Cycle Vend Price	200	0-65535
3	CYCLE-	Cycle Time	-	-
a	CYCLE 1	Heat Cycle Time Minutes	45	1-99
b	CYCLE 2	Heat Cycle Time Seconds	0	0-59
c	CYCLE 3	No Heat Cycle Time Minutes	45	1-99
d	CYCLE 4	No Heat Cycle Time Seconds	0	0-59
4	TOP-	Top-Off Data	-	-
a	TOP 1	Top-Off	on	on/oFF
b	TOP 2	Coin 1 Top-Off Time Minutes	5	0-99
c	TOP 3	Coin 1 Top-Off Time Seconds	38	0-59
d	TOP 4	Coin 2 Top-Off Time Minutes	22	0-99
e	TOP 5	Coin 2 Top-Off Time Seconds	30	0-59

Table continues...

Option Number	Option Display	Description	Default Value	Value Range
5	<i>PL5 dP</i>	Vend Price Decimal Point	-	-
6	<i>dEn 1</i>	Coin #1 Value	25	1-65535
7	<i>dEn 2</i>	Coin #2 Value	100	1-65535
8	<i>PL5E</i>	Start Pulse Value	25	1-65535
9	<i>PL5mod</i>	Start Pulse Mode	128	128 (on - single pulse), 192 (on - multiple pulses) or oFF
10	<i>PLYPE</i>	Programmable Output Type	0	0-13
11	<i>dFLCFC</i>	Default Cycle	4	1 (High Temp), 2 (Low Temp), 3 (No Heat), 4 (Med Temp), or 5 (Delicates)
12	<i>CRrd</i>	Card Reader Display Control On/Off	oFF	on/oFF
13	<i>AUd io</i>	Audio Signal	29	0-31
14	<i>nodE</i>	Network Node Number	250	1-250
15	<i>Error-</i>	Errors	-	-
a	<i>LErr-</i>	Coin Error Parameters	-	-
1	<i>LErr 1</i>	Coin Error On/Off	on	on/oFF
2	<i>LErr 2</i>	Coin Error Penalty On/Off	oFF	on/oFF
3	<i>LErr 3</i>	Vend Header Present Error On/Off	oFF	on/oFF
b	<i>LErErr</i>	Clear Error On/Off	oFF	on/oFF
16	<i>Cdt -</i>	Cooldown Time	-	-
a	<i>Cdt 1</i>	High Temp Cooldown Time	3 - North America 10 - Outside North America	1-15
b	<i>Cdt 2</i>	Medium Temp Cooldown Time	3 - North America 10 - Outside North America	1-15

Table continues...

Option Number	Option Display	Description	Default Value	Value Range
c	<i>CDt 3</i>	Low Temp Cooldown Time	3 - North America 8 - Outside North America	1-15
d	<i>CDt 4</i>	Delicates Temp Cool-down Time	3 - North America 6 - Outside North America	1-15
17	<i>t d F</i>	Time Display Format	nn	nn (minutes only) or nnSS (minutes and seconds)
18	<i>TEMP -</i>	Temperature	-	-
a	<i>TEMP 1</i>	High Temperature	160°F/71°C	100°-160°F/38°-72°C
b	<i>TEMP 2</i>	Medium Temperature	155°F/68°C	100°-160°F/38°-72°C
c	<i>TEMP 3</i>	Low Temperature	145°F/62°C	100°-160°F/38°-72°C
d	<i>TEMP 4</i>	Delicates Temperature	115°F/46°C	100°-160°F/38°-72°C
19	<i>TEMP C</i>	Temperature (Fahrenheit/Celsius)	0	0 (Fahrenheit)/1 (Celsius)
20	<i>rTC -</i>	Real Time Clock Parameters	-	-
a	<i>rTC 1</i>	Set Real-Time Clock Minutes	-	0-59
b	<i>rTC 2</i>	Set Real-Time Clock Hours	-	0-23
c	<i>rTC 3</i>	Set Real-Time Clock Day	-	1-7
d	<i>rTC 4</i>	Set Real-Time Clock Date	-	1-31
e	<i>rTC 5</i>	Set Real-Time Clock Month	-	1-12
f	<i>rTC 6</i>	Set Real-Time Clock Year	-	0-99
21	<i>dLS-</i>	Daylight Savings Parameters	on	on/oFF
a	<i>dLS 1</i>	Daylight Savings On/Off	-	-
b	<i>dLS 2</i>	Start Month	-	1-12

Table continues...


Option Number	Option Display	Description	Default Value	Value Range
c	<i>dL5 3</i>	Start Day of Week	-	1-7
d	<i>dL5 4</i>	Start Week of Month	-	1-4
e	<i>dL5 5</i>	Start Hour	-	0-23
f	<i>dL5 6</i>	End Month	-	1-12
g	<i>dL5 7</i>	End Day of Week	-	1-7
h	<i>dL5 8</i>	End Week of Month	-	1-4
i	<i>dL5 9</i>	End Hour	-	0-23
22	<i>SP 1-</i>	Special Vend 1 Parameters	-	-
a	<i>SP 1 1</i>	Special Vend 1 Days Enable	0	0 (oFF) - 255
b	<i>SP 1 2</i>	Special Vend 1 Start Minute	0	0-59
c	<i>SP 1 3</i>	Special Vend 1 Start Hour	0	0-23
d	<i>SP 1 4</i>	Special Vend 1 Start Date	0	0 (oFF) - 31
e	<i>SP 1 5</i>	Special Vend 1 Start Month	0	0 (oFF) - 12
f	<i>SP 1 6</i>	Special Vend 1 Start Year	0	0-99
g	<i>SP 1 7</i>	Special Vend 1 Length in Hours	0	0-24
h	<i>SP 1 8</i>	Special Vend 1 End Date	0	0 (oFF) - 31
i	<i>SP 1 9</i>	Special Vend 1 End Month	0	0 (oFF) - 12
j	<i>SP 1 10</i>	Special Vend 1 End Year	0	0-99
k	<i>SP 1 11</i>	Special Vend 1 Heat Cycle Vend Price	0	0 - 65535
l	<i>SP 1 12</i>	Special Vend 1 Heat Cycle Time Minutes	1	1-99

Table continues...

Option Number	Option Display	Description	Default Value	Value Range
m	<i>SP 1 13</i>	Special Vend 1 Heat Cycle Time Seconds	0	0-59
n	<i>SP 1 14</i>	Special Vend 1 No Heat Cycle Vend Price	0	0-65535
o	<i>SP 1 15</i>	Special Vend 1 No Heat Cycle Time Minutes	1	1-99
p	<i>SP 1 16</i>	Special Vend 1 No Heat Cycle Time Seconds	0	0-59
q	<i>5 P 1 17</i>	Special Vend 1 Coin 1 Topoff Time Minutes	1	0-99
r	<i>5 P 1 18</i>	Special Vend 1 Coin 1 Topoff Time Seconds	0	0-59
s	<i>5 P 1 19</i>	Special Vend 1 Coin 2 Topoff Time Minutes	1	0-99
t	<i>5 P 1 20</i>	Special Vend 1 Coin 2 Topoff Time Seconds	0	0-59
23	<i>SP2</i>	Special Vend 2 Days Enable (On/Off)	oFF	on/oFF
24	<i>SP3</i>	Special Vend 3 Days Enable (On/Off)	oFF	on/oFF
25	<i>SP4</i>	Special Vend 4 Days Enable (On/Off)	oFF	on/oFF
26	<i>LPAS 1</i>	Low Power/Auto Shutdown 1 Days Enable (On/Off)	oFF	on/oFF
27	<i>LPAS 2</i>	Low Power/Auto Shutdown 2 Days Enable (On/Off)	oFF	on/oFF
28	<i>LPAS 3</i>	Low Power/Auto Shutdown 3 Days Enable (On/Off)	oFF	on/oFF
29	<i>LPAS 4</i>	Low Power/Auto Shutdown 4 Days Enable (On/Off)	oFF	on/oFF
30	<i>PF rE5</i>	Power Fail Reset	oFF	on (0-120 minutes)

Table continues...

Option Number	Option Display	Description	Default Value	Value Range
31	<i>irA En</i>	IR Access (On/Off)	on	on/oFF
32	<i>rAPdEn</i>	Manual Rapid Advance (On/Off)	on	on/oFF
33	<i>d iRSEn</i>	Manual Diagnostics (On/Off)	on	on/oFF
34	<i>Ft En</i>	Factory Test Cycle	on	on/oFF
35	<i>LUC -</i>	Lucky Cycle	on	on/oFF
a	<i>LUC 1</i>	Lucky Cycle Day(s) of Week Enable	on	on/oFF
b	<i>LUC 2</i>	Lucky Cycle Number	on	0 (oFF) - 255
c	<i>LUC 3</i>	Lucky Cycle Display Option (On/Off)	oFF	on/oFF
36	<i>Ht dP</i>	Heat Indicator Decimal Point (On/Off)	oFF	on/oFF
37	<i>PCdL d</i>	Programmable Close Door/Lid Display (On/Off)	on	on/oFF
38	<i>PPSt d</i>	Programmable Push Start Display (On/Off)	on	on/oFF
39	<i>PadL d</i>	Programmable Open Door/Lid Display (On/Off)	on	on/oFF
40	<i>RE5 da</i>	Vend Price Display Override	oFF	on/oFF
41	<i>oPL -</i>	OPL Parameters	on	on/oFF
a	<i>oPL 1</i>	OPL Mode Enable (On/Off)	on	on/oFF
b	<i>oPL 3</i>	OPL Display Power Save (On/Off)	on	on/oFF
42	<i>droP</i>	Drop Off Mode (On/Off)	oFF	on/oFF
43	<i>oUt</i>	Out of Order (On/Off)	on	on/oFF

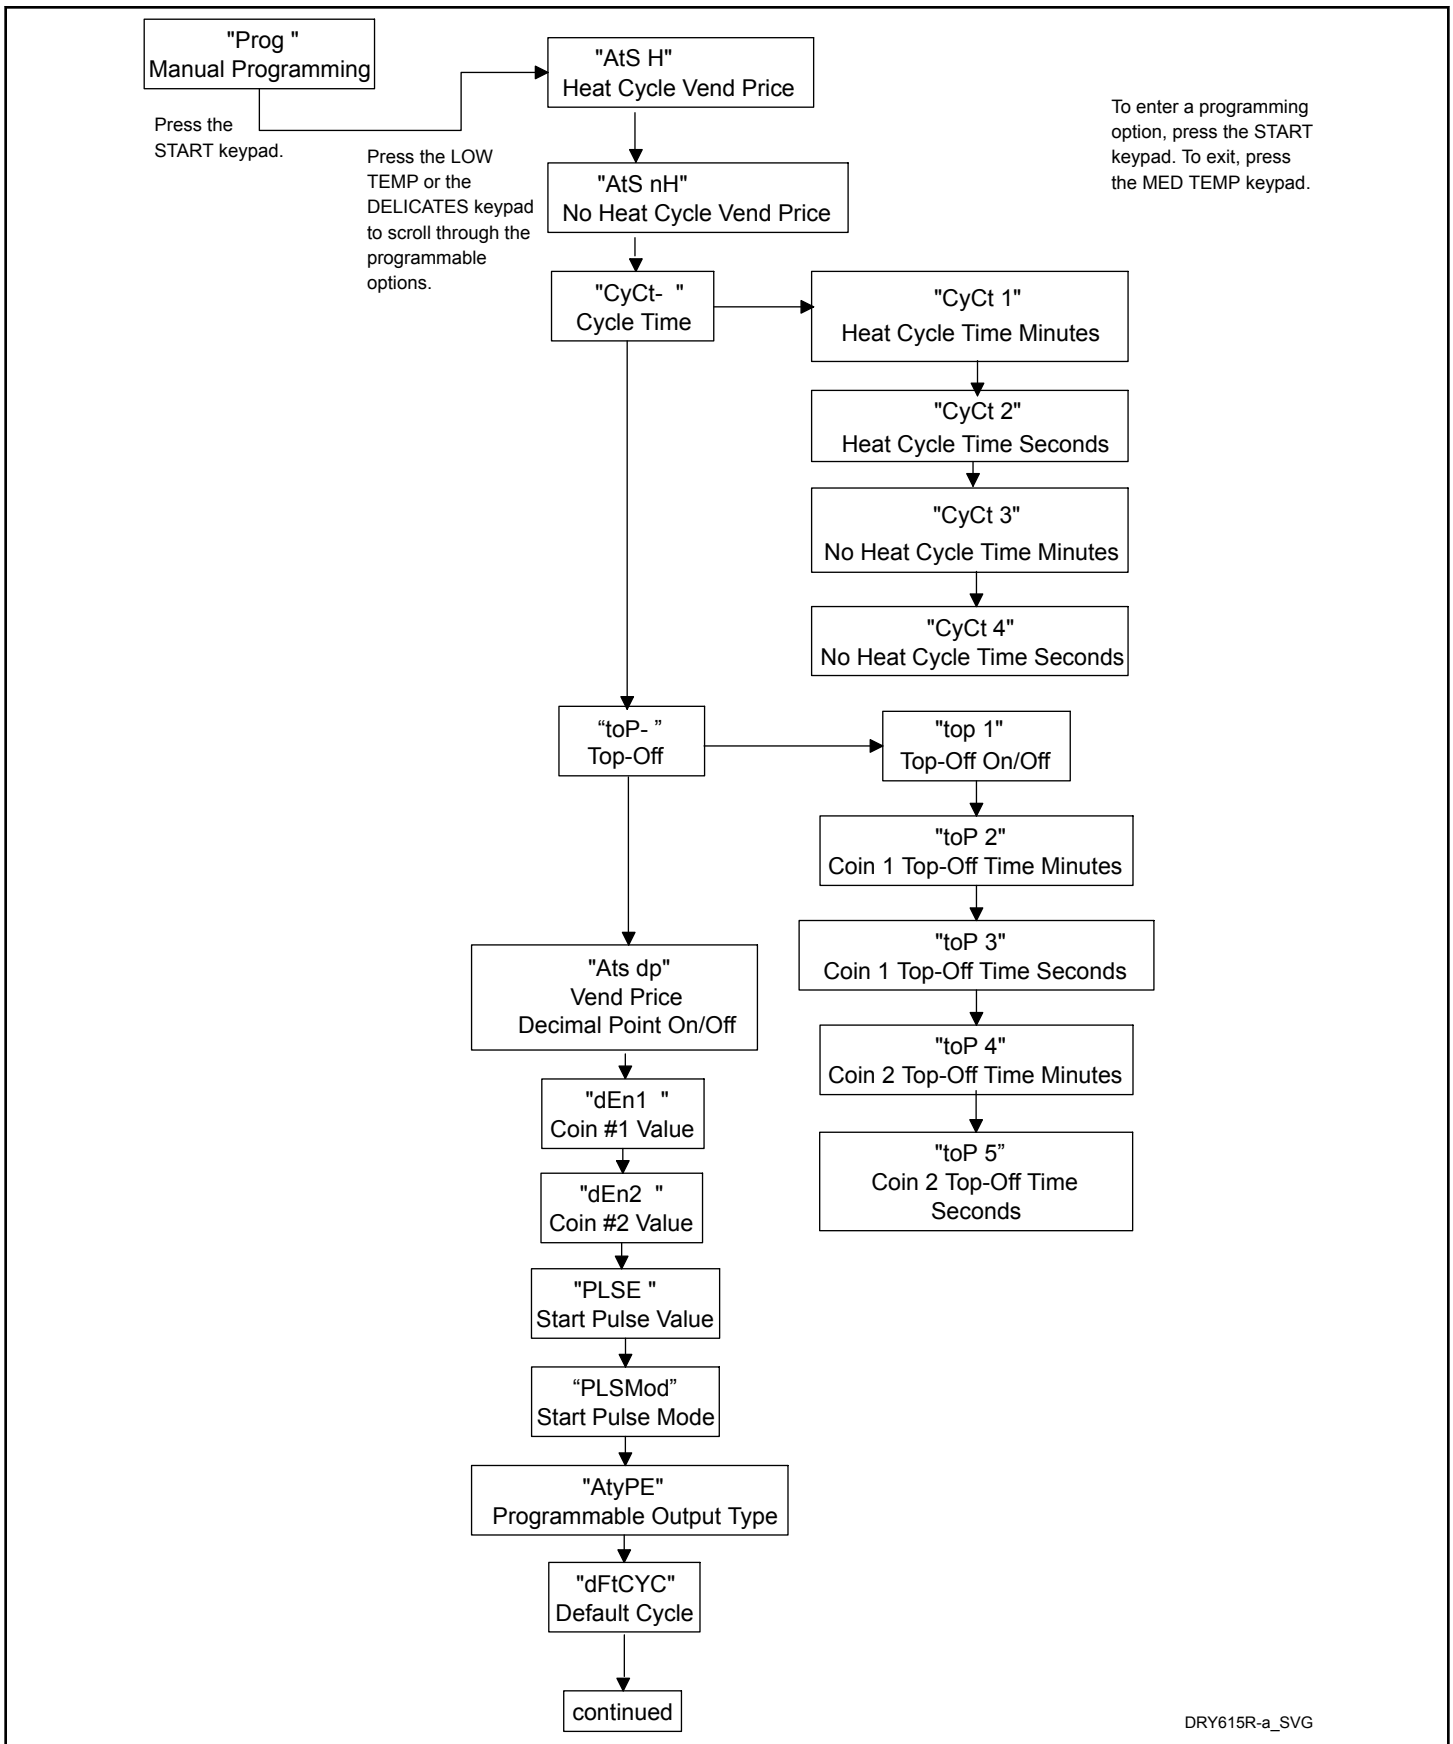

DRY615R-a_SVG

Figure 4


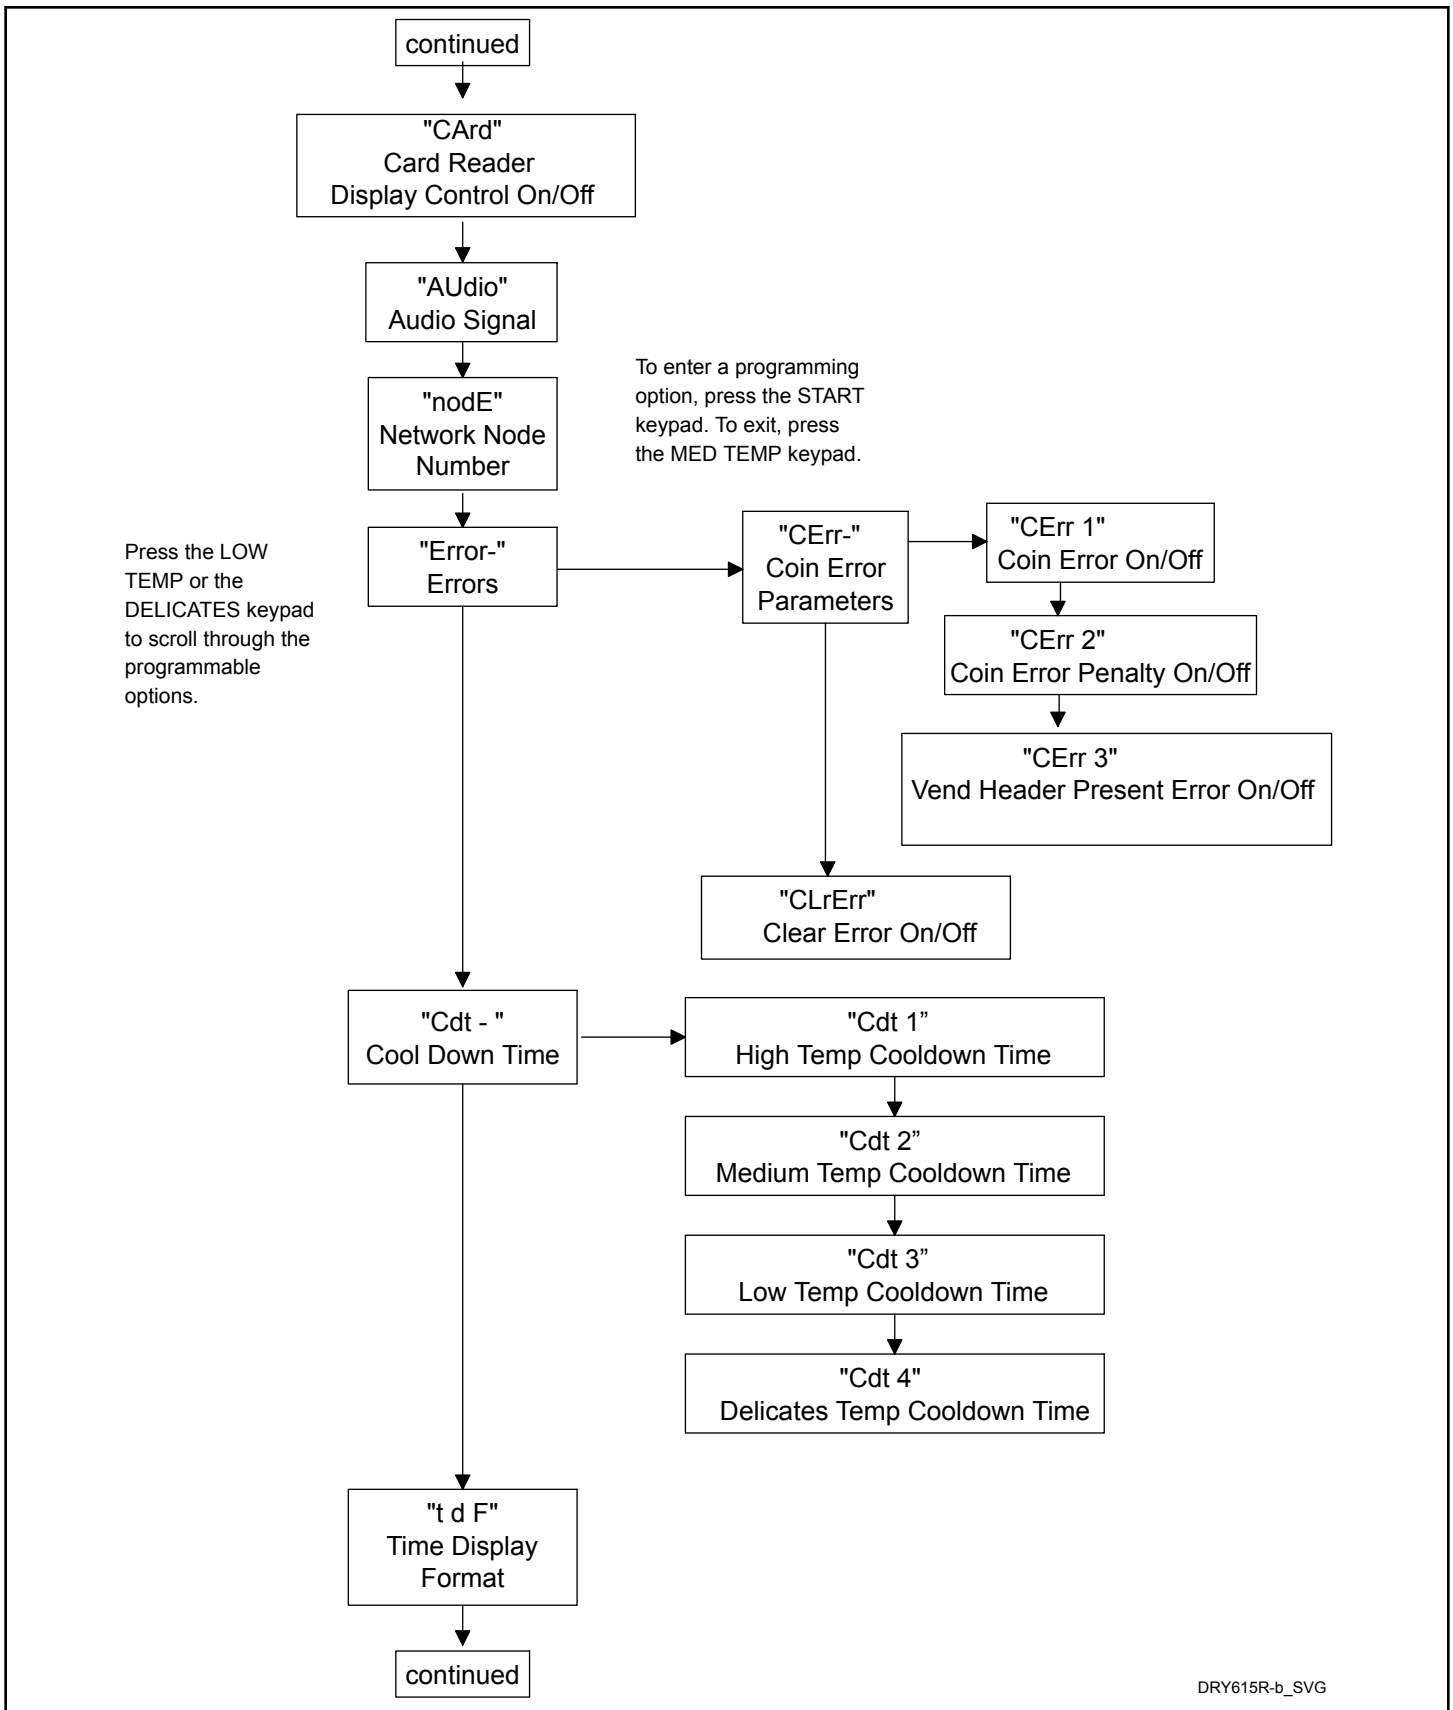


Figure 5

DRY615R-b_SVG

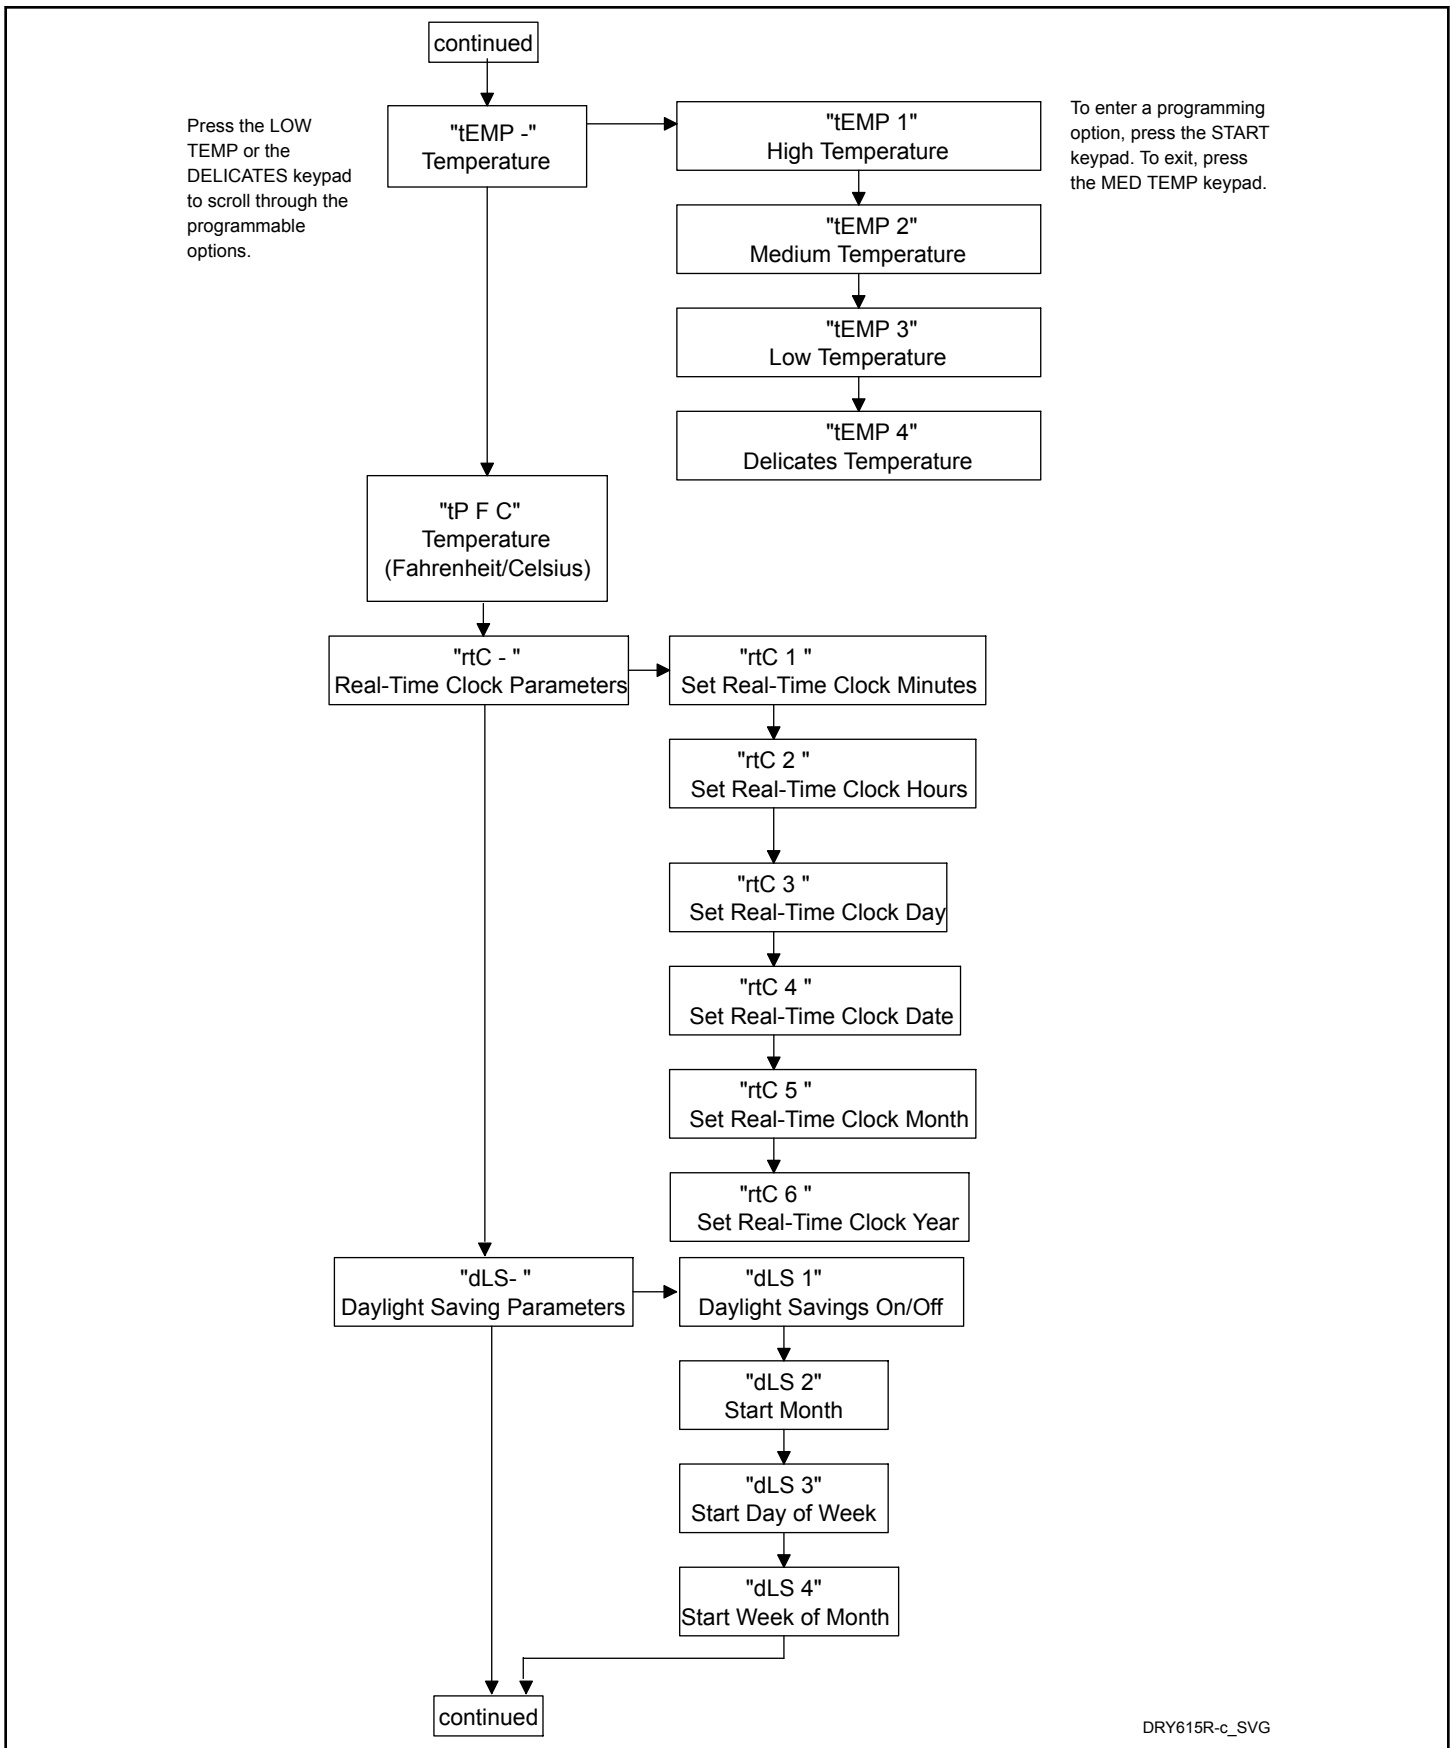

DRY615R-c_SVG

Figure 6

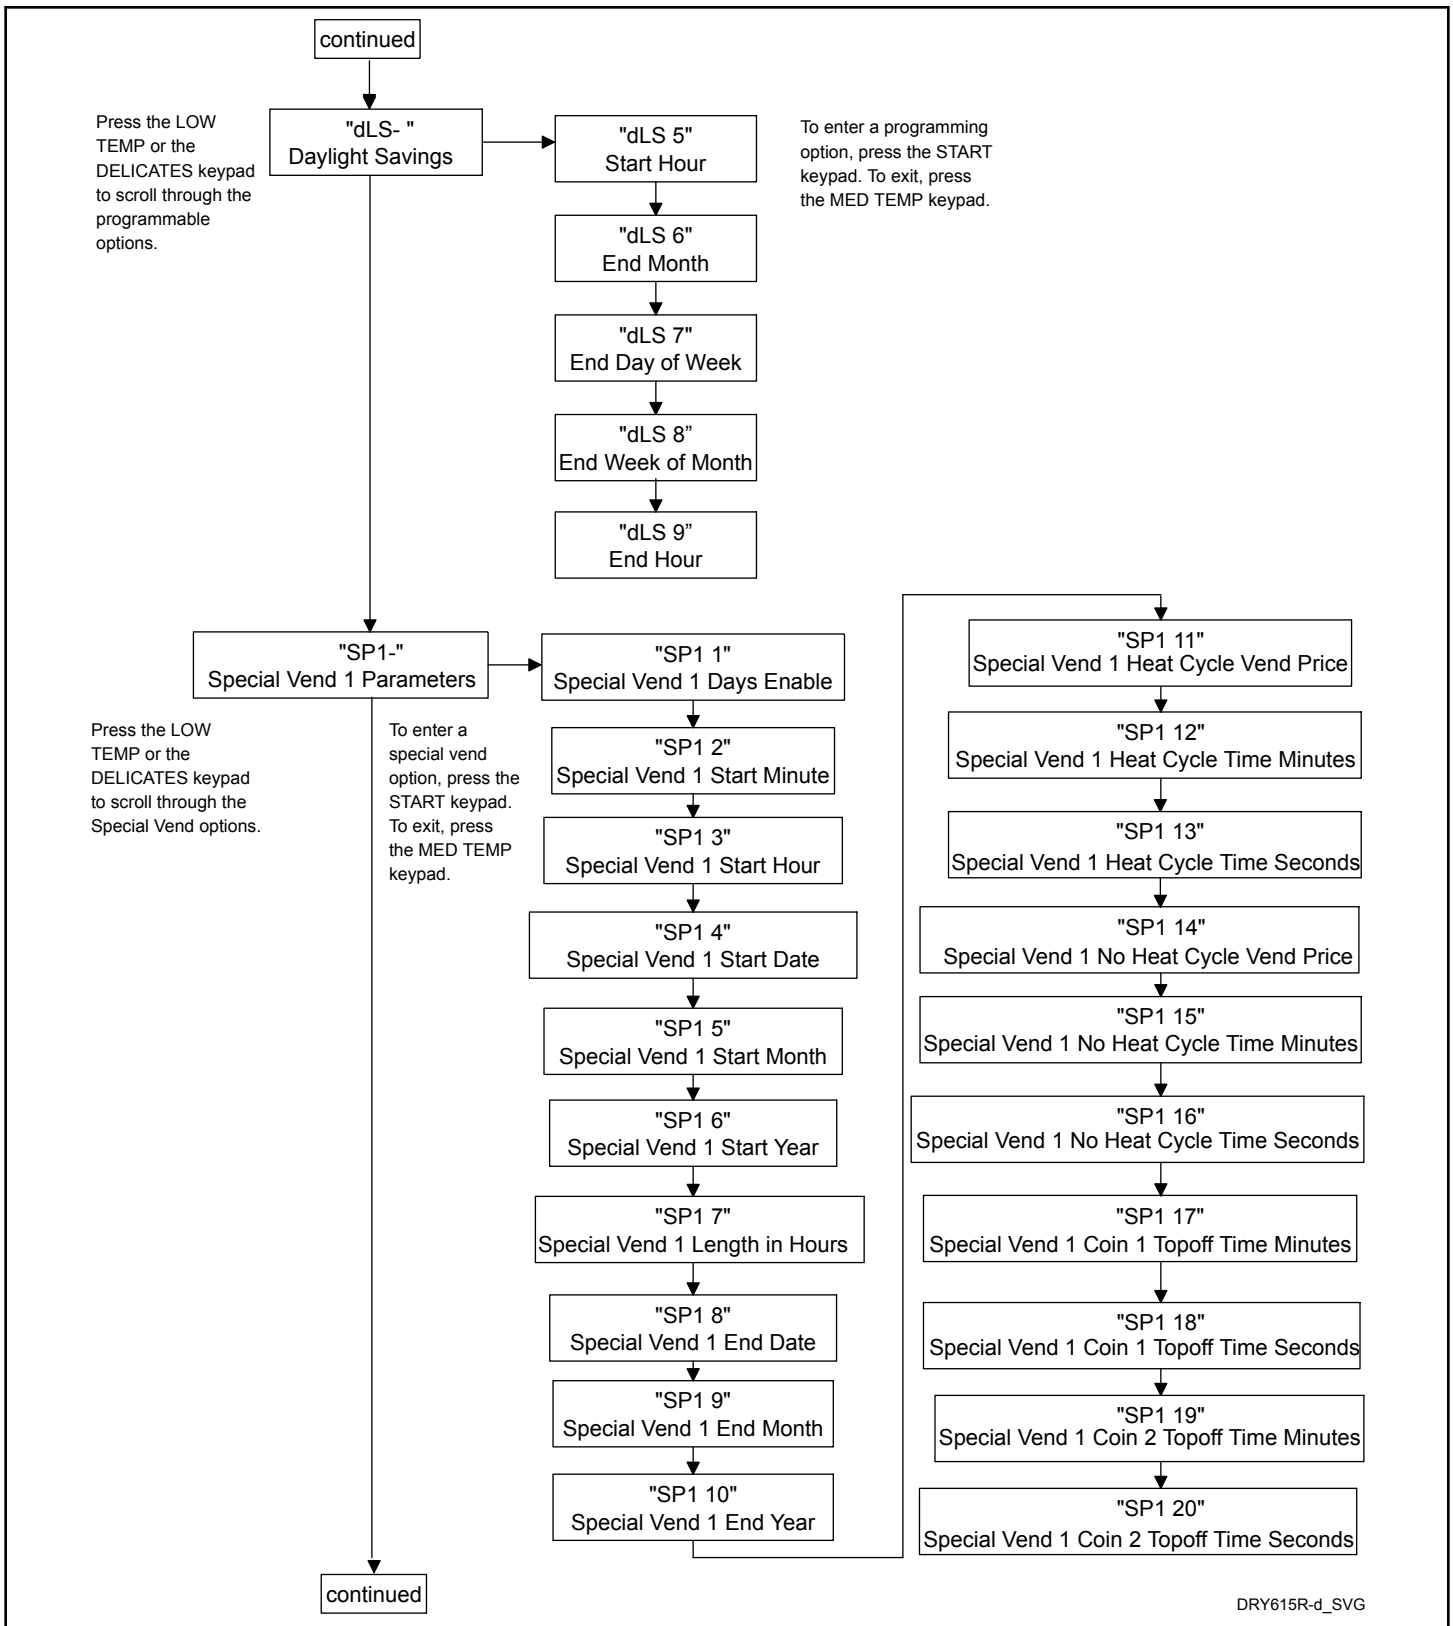


Figure 7

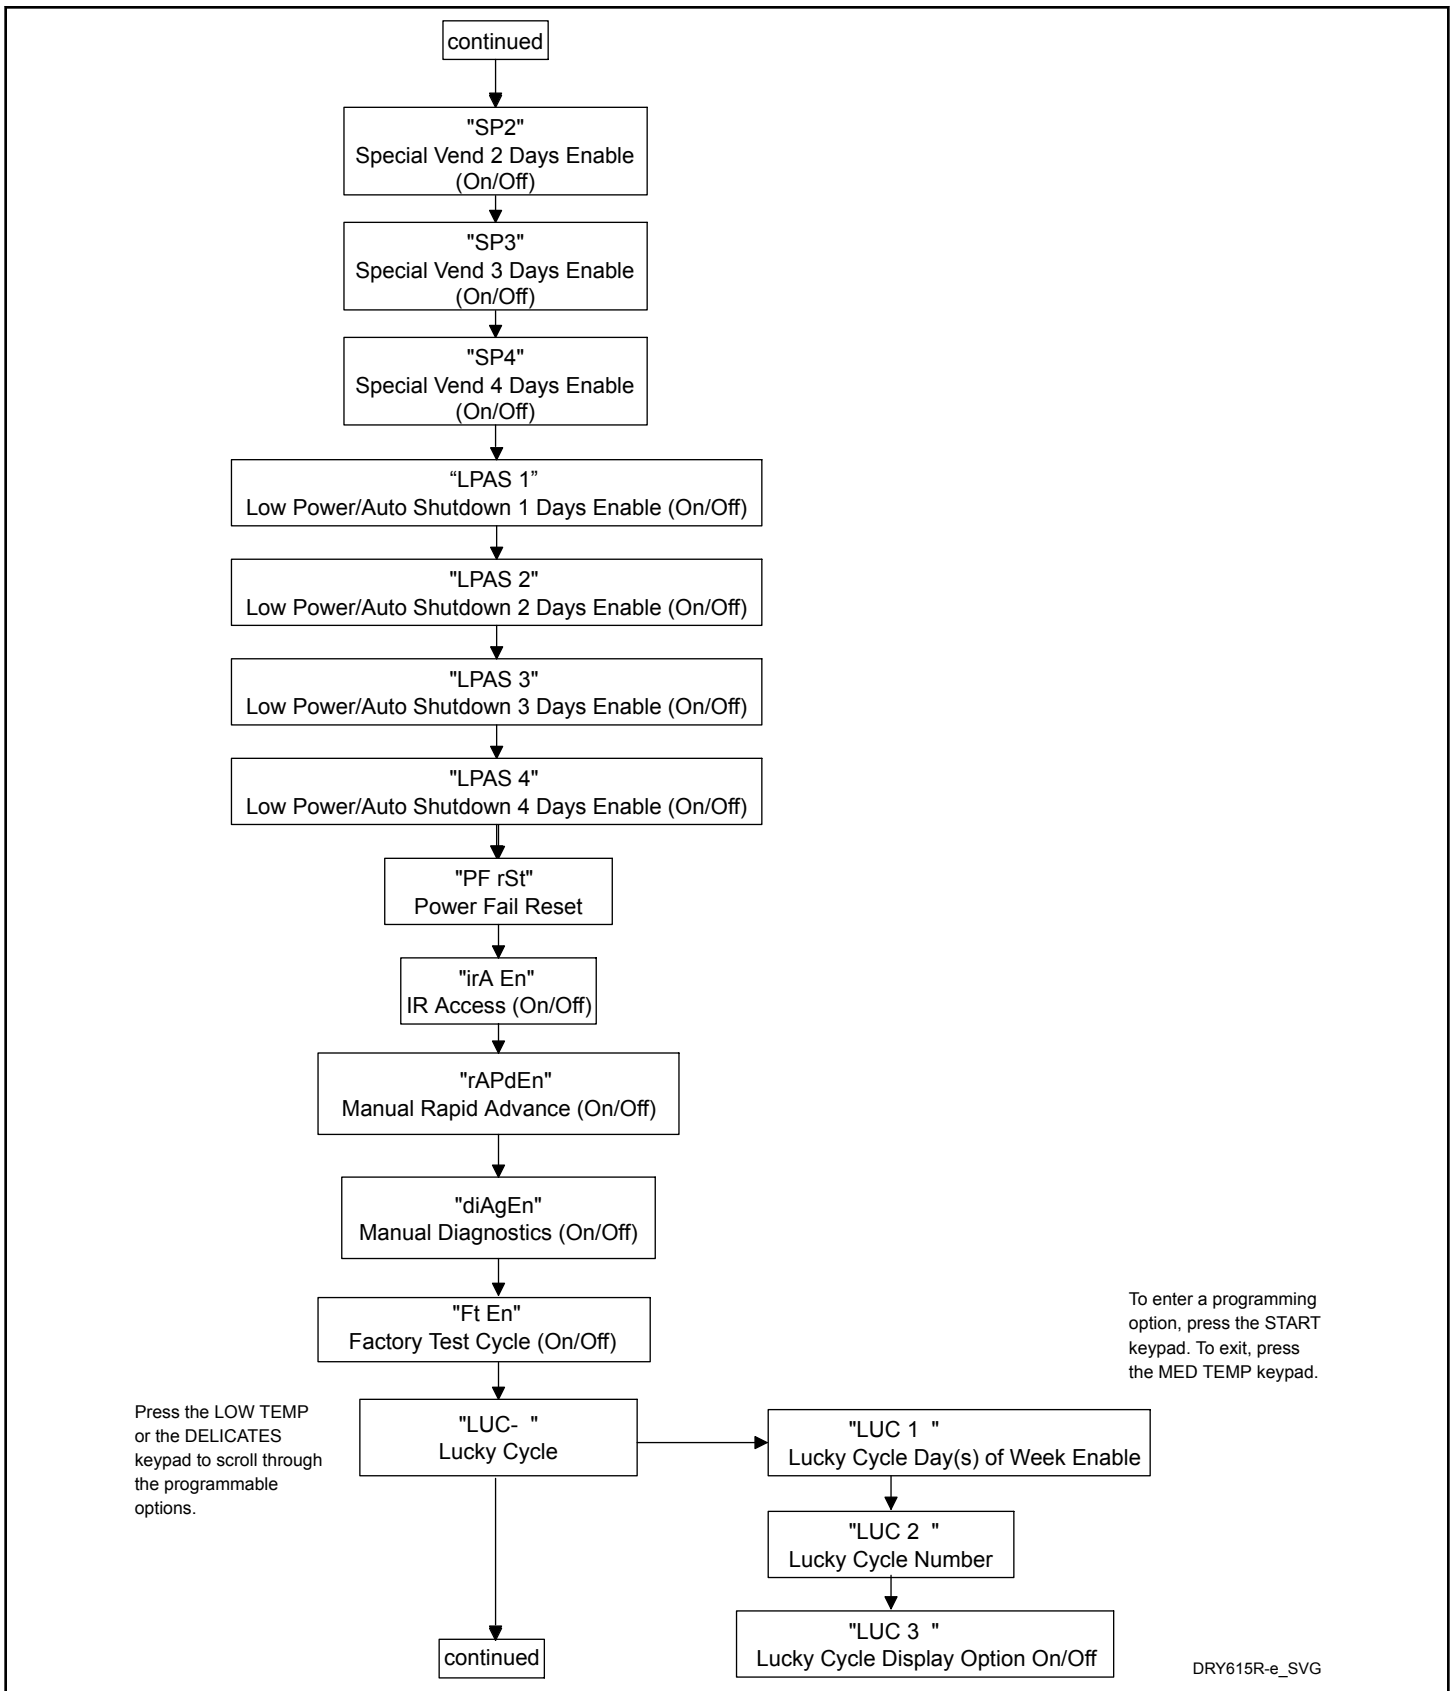


Figure 8

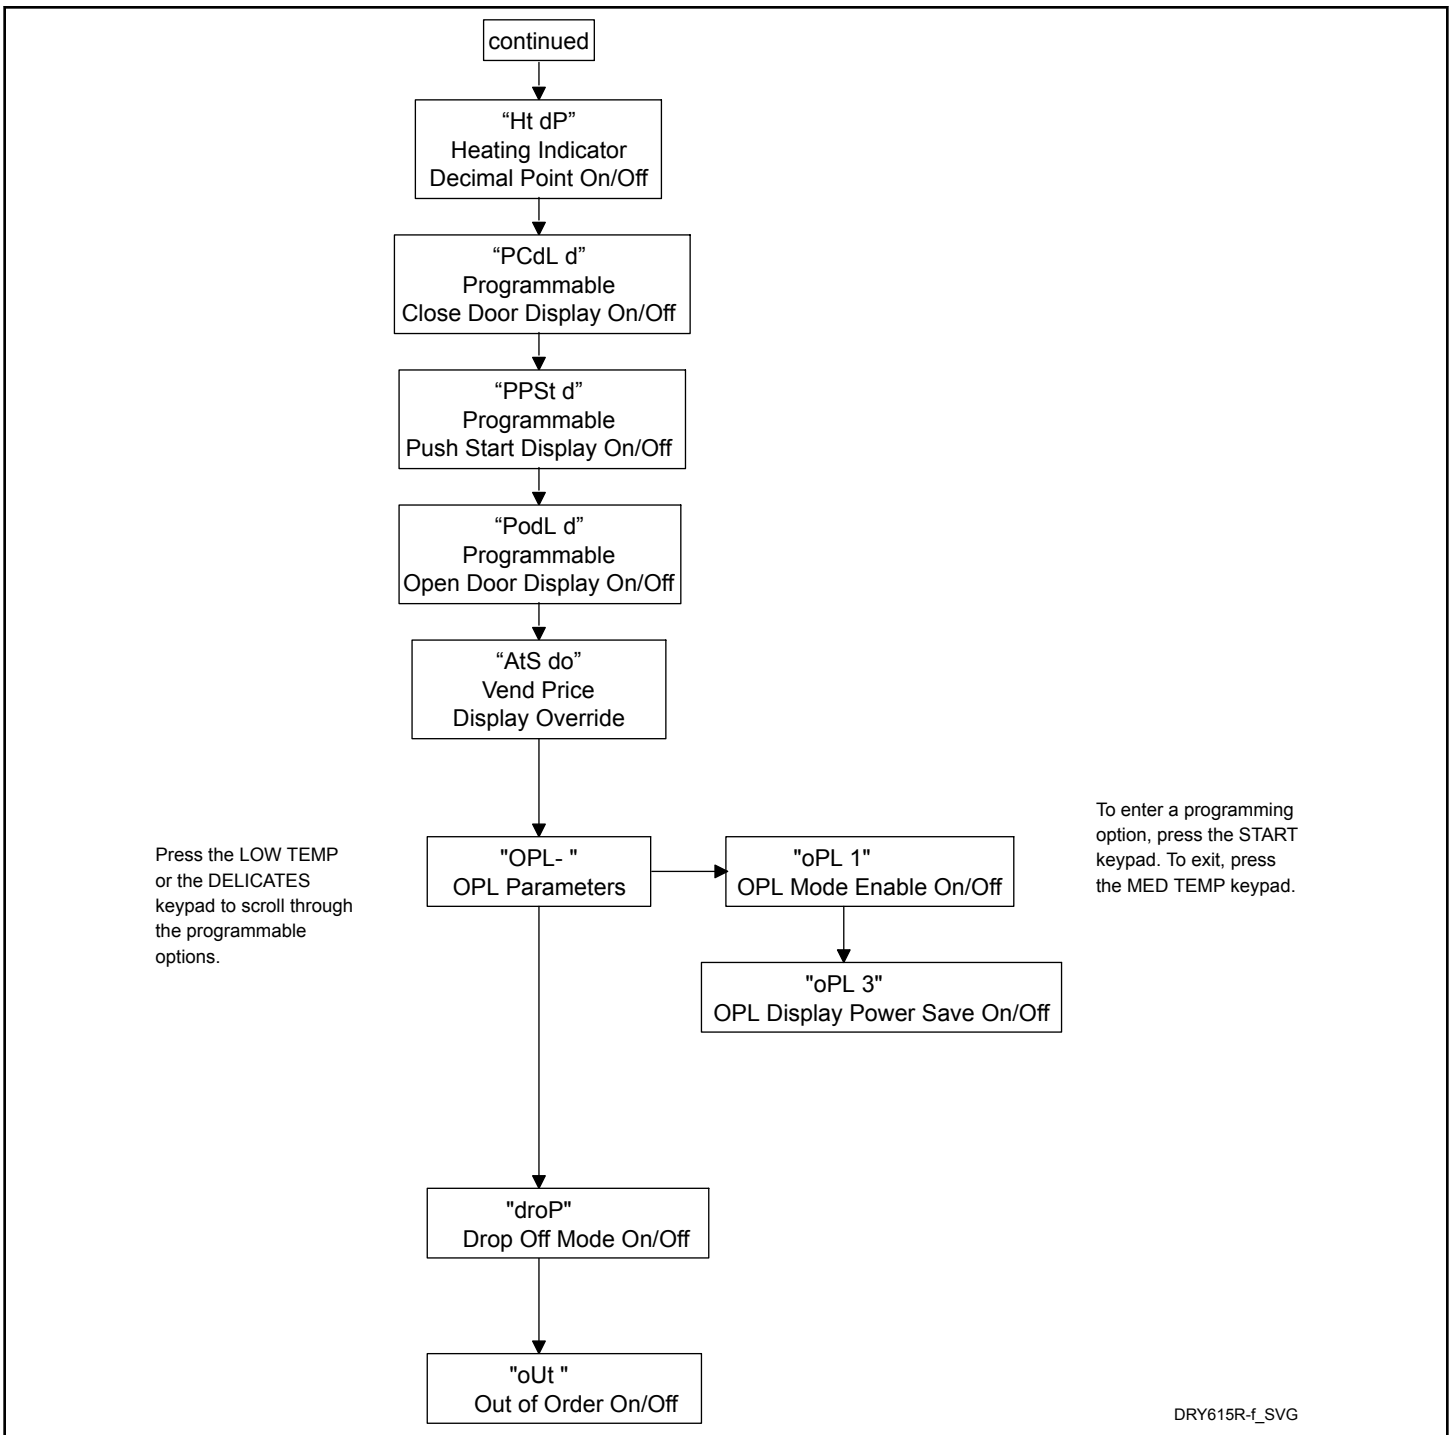


Figure 9

Heat Vend Price *RL5 H* Changing Vend Price

This option allows the owner to set the vend price for a heated cycle. This vend price will be shown in the display when in Ready Mode.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.

2. Press the LOW TEMP (Λ) or the DELICATES (\vee) keypad until *Prog* appears in the display. Press the START (enter) keypad and *RL5 H* will appear in the display.
3. *RL5 H* will appear in the display. Press the START (enter) keypad.
4. Press the LOW TEMP (Λ) or the DELICATES (\vee) keypad to increase or decrease the value of the fifth digit.

NOTE: The vend price can be set from 0 to 65,535. The default value is 200.

NOTE: The vend price can be set from 0 to 65,535. The default value is 25.

NOTE: To go back to the current programmable option without changing the value press the MED TEMP (<) keypad.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the active digit and the START (enter) keypad to enter the value of the digit and advance to the next digit.
6. Press the START (enter) keypad with the last active digit. The new value is saved and the next option will appear in the display.

No Heat Vend Price *RL5 nH*

This option allows the owner to set the vend price for a NO HEAT cycle. This vend price will be shown in the display when NO HEAT is selected.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *Pr09* appears in the display. Press the START (enter) keypad and *RL5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *RL5 nH* appears in the display.
4. When *RL5 nH* appears in the display, press the START (enter) keypad.
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the fifth digit.

NOTE: The vend price can be set from 0 to 65,535. The default value is 200.

NOTE: The vend price can be set from 0 to 65,535. The default value is 25.

NOTE: To go back to the current programmable option without changing the value, press the MED TEMP (<) keypad.

6. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the active digit and the START (enter) keypad to enter the value of the digit and advance to the next digit.
7. Press the START (enter) keypad with the last active digit. The new value is saved and the next option will appear in the display.

Cycle Time *CYCLE -*

This option allows the owner to set the amount of time for all cycles.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *Pr09* appears in the display. Press the START (enter) keypad and *RL5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *CYCLE -* appears in the display.
4. When *CYCLE -* appears in the display, press the START (enter) keypad. There are four programmable cycle time options. Refer to *Table 3*.

Display	Cycle Time Options
<i>CYCLE 1</i>	Heat Cycle Time Minutes (1-99)
<i>CYCLE 2</i>	Heat Cycle Time Seconds (0-59)
<i>CYCLE 3</i>	No Heat Cycle Time Minutes (1-99)
<i>CYCLE 4</i>	No Heat Cycle Time Seconds (0-59)

Table 3

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select the desired cycle time option.

NOTE: Cycle time can be set from one (1) to 99 minutes.

NOTE: The default value for both cycles in minutes is 45 and the default value for seconds is 0.

NOTE: The default value for both cycles in minutes is 5 and the default value for seconds is 0.

6. Press the START (enter) keypad when the correct option appears in the display.
7. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the number of minutes or seconds displayed to the desired number of minutes or seconds.
8. Press the START (enter) keypad when the correct number of minutes or seconds appears in the display. The new value is saved and the next option in the parameter will appear in the display.

Top-Off Data *TOP -*

This option allows the owner to set the amount of top-off time for Coin #1 and Coin #2.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.

2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PrOG** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **LoP-** appears in the display.
4. When **LoP-** appears in the display, press the START (enter) keypad. There are five programmable top-off options. Refer to *Table 4*.

Display	Top-Off Options
LoP 1	Top-Off ON/OFF
LoP 2	Coin 1 Top-Off Time Minutes (0-99)
LoP 3	Coin 1 Top-Off Time Seconds (0-59)
LoP 4	Coin 2 Top-Off Time Minutes (0-99)
LoP 5	Coin 2 Top-Off Time Seconds (0-59)

Table 4

NOTE: If Top-Off is enabled, each coin entered will add a top-off time. If Top-Off is disabled, the full vend price must be entered to add time.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select the desired top-off option.
6. Press the START (enter) keypad when the correct option appears in the display.
7. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the number of minutes or seconds displayed to the desired number of minutes or seconds.

NOTE: Top-Off minutes can be set from 0 to 99 minutes and Top-Off seconds can be set from 0-59 seconds. The maximum amount of time for a cycle, including the top-off time, is 99 minutes. The minimum amount of time is 10 seconds.

NOTE: Top-Off is on by default. The default values for each option are as follows:

- Coin 1 Top-Off Time Minutes = 5**
- Coin 1 Top-Off Time Seconds = 38**
- Coin 2 Top-Off Time Minutes = 22**
- Coin 2 Top-Off TimeSeconds = 30**

NOTE: Top-Off is on by default. The default values for each option are as follows:

- Coin 1 Top-Off Time Minutes = 5**
- Coin 1 Top-Off Time Seconds = 0**
- Coin 2 Top-Off Time Minutes = 20**
- Coin 2 Top-Off TimeSeconds = 0**

8. Press the START (enter) keypad when the correct number of minutes or seconds appears in the display. The new value is saved and the next option in the parameter will appear in the display.

Vend Price Decimal Point **RL5 dP**

This option allows the owner to enable vend price decimal point. When enabled, the control will display the decimal point in a vend price in the second or third position.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PrOG** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **RL5 dP** appears in the display.
4. When **RL5 dP** appears in the display, press the START (enter) keypad.
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the available options.

NOTE: The decimal point can be set at 0,2 (xxx.xx), or 3 (xx.xxx). The factory default setting is 2 (xxx.xx).

6. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select the desired option.
7. Press the START (enter) keypad when the correct number of minutes or seconds appears in the display. The new value is saved and the next option in the parameter will appear in the display.

Coin #1 Value **dEn 1**

This option allows the owner to set a specific numerical value for a coin entered. For example, in the United States the coin value for one quarter would be measured in cents (25). Therefore, the coin value entered for one quarter would be 00025.

If the Heat Vend Price is set for **150**, and the Coin #1 Value is set for **00025**, the vend price displayed will decrease by 25 for each coin entered into coin drop #1.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.

2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **Prø9** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **dEn 1** appears in the display.
4. When **dEn 1** appears in the display, press the START (enter) keypad.
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the fifth digit.

NOTE: The coin value can be set from 1 to 65,535. The default value is 25.

NOTE: To go back to the current programmable option without changing the value press the MED TEMP (<) keypad.

6. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the active digit and the START (enter) keypad to enter the value of the digit and advance to the next digit.
7. Press the START (enter) keypad with the last active digit. The new value is saved and the next option will appear in the display.

Coin #2 Value **dEn 2**

This option allows the owner to set a specific numerical value for a coin entered when using the dual coin drop. For example, the coin value for a dollar coin would be measured in cents (100). Therefore, the coin value entered for one dollar coin would be 00100.

If the Heat Vend Price is set for **200**, and the Coin #2 Value is set for **00 100**, the vend price displayed will decrease by 100 for each dollar coin entered in coin drop #2.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **Prø9** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **dEn 2** appears in the display.
4. When **dEn 2** appears in the display, press the START (enter) keypad.
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the fifth digit.

NOTE: The coin value can be set from 1 to 65,535. The default value is 100.

NOTE: To go back to the current programmable option without changing the value press the MED TEMP (<) keypad.

6. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the active digit and the START (enter) keypad to enter the value of the digit and advance to the next digit.
7. Press the START (enter) keypad with the last active digit. The new value is saved and the next option will appear in the display.

Start Pulse Value **PULSE**

This option allows the owner to program the value of the Start Pulse if used for multiple pulses with an after-market central card reader or pay system. Refer to option 5 for additional information.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **Prø9** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **PL5E** appears in the display.
4. When **PL5E** appears in the display, press the START (enter) keypad.
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the fifth digit.

NOTE: The Start Pulse Value can be set from 1 to 65,535. The default value is 25.

NOTE: To go back to the current programmable option without changing the value press the MED TEMP (<) keypad.

6. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the value of the active digit and the START (enter) keypad to enter the value of the digit and advance to the next digit.
7. Press the START (enter) keypad with the last active digit. The new value is saved and the next option will appear in the display.

Start Pulse Mode **PL5Mod**

This option allows the owner to program the Start Pulse Input. The Start Pulse Mode can be used for after-market central pay or card systems. The central system sends the start pulse to the Start Pulse Input of the control to start the cycle. If set for single pulse, one start pulse from the central system will start the cycle. If set for multiple pulses, each pulse will deduct from the vend price the value set up in (Start Pulse Value) until the vend is satisfied.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **Prø9** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.

- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *PL5Mod* appears in the display.
- When *PL5Mod* appears in the display, press the START (enter) keypad. A number, or *OFF*, will appear in the display. The number corresponds to the current Start Pulse Mode Program Value.
- Locate the desired number in the first column of *Table 5* below.

Start Pulse Mode Value	Start Pulse ON/OFF	Single Pulse/ Multiple Pulses
oFF	OFF	Single Pulse
128	ON	Single Pulse
192	ON	Multiple Pulses

Table 5

NOTE: The default value is 128.

- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number until correct.

NOTE: To go back to the current programmable option without changing the value press the MED TEMP (<) keypad.

- Press the START (enter) keypad when the correct number appears in the display. The new value is saved and the next option will appear in the display.

Programmable Output Type *RETYPE*

This option allows the owner to program when the control provides a programmable output for card and central pay systems to show when the machine is available.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PROG* appears in the display. Press the START (enter) keypad and *RETYPE* will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *RETYPE* appears in the display.
- When *RETYPE* appears in the display, press the START (enter) keypad. A number will appear in the display. This number corresponds to the current Programmable Output Type Value.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number selected from *Table 6*.

Programmable Output Type Value	Mode(s) in Which Programmable Output Signal is Active
0	Ready Mode only
1 - Available at Start	Ready Mode, Start Mode
2 - Available with End of Cycle	Ready Mode, End of Cycle Mode
3 - Available with Start and End of Cycle	Ready Mode, End of Cycle Mode, Start Mode
4 - Vend is not satisfied	Ready Mode, Partial Vend Mode
5 - Vend is not satisfied with End of Cycle	Ready Mode, Partial Vend Mode, End of Cycle Mode
6 - Available with Vend	Ready Mode, Start Mode
7 - Available with Vend and End of Cycle	Ready Mode, End of Cycle Mode, Partial Vend Mode, Start Mode
8 - Machine is In Use	Run Mode
9 - Cycle is Complete	End of Cycle Mode
10 - Lucky Cycle	For 10 seconds when Start Mode is entered
11 - Break In Alarm	For 15 seconds when Break In Alarm is triggered at same time as audio output tone
12 - End of Cycle is Entered	For 3 seconds when End of Cycle Mode is entered
13 - Motor Running	Whenever motor is running

Table 6

NOTE: The default value is 0.

- Press the START (enter) keypad when the correct number appears in the display. The new value is saved and the next option will appear in the display.

Default Cycle *DFELCY*

This option allows the owner to set the default cycle the machine will enter when in the Ready Mode. When programming the default cycle, refer to *Table 7*.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PROG** appears in the display. Press the START (enter) keypad and **RLS H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **dFLCYC** appears in the display.
4. When **dFLCYC** appears in the display, press the START (enter) keypad. A number will appear in the display. This number corresponds to the current default cycle value. Refer to *Table 7*.
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number selected from *Table 7*.
6. Press the START (enter) keypad when the correct number appears in the display. The new value is saved and the next option will appear in the display.

How to Read Default Cycle Value Table

To determine the correct number required to program Default Cycle, use the following table. The Default Value column contains the number required in step 5.

The corresponding cycle LED will be lit while selecting a default cycle. For example, when the display shows **5**, the Delicates LED is lit.

Default Cycle Value	Cycle Type
1	HIGH TEMP
2	LOW TEMP
3	NO HEAT
4	MED TEMP
5	DELICATES

Table 7

NOTE: The default cycle programmed at the factory is 4, Med Temp.

Card Reader Display Control **CRd**

This option allows the owner to program whether the display is controlled by the machine’s electronic control or by the card reader.

NOTE: This feature does not need to be programmed manually. The card reader itself makes this determination.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.

2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PROG** appears in the display. Press the START (enter) keypad and **RLS H** will appear in the display.
 3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **CRd** appears in the display.
 4. When **CRd** appears in the display, press the START (enter) keypad. The current Card Reader Display Control status will appear in the display. **on** = Card Reader controls display **oFF** = Machine Electronic Control controls display
- NOTE: The default value is oFF.**
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
 6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Audio Signal **Aud io**

This option allows the owner to program when the signal will sound.

There are five occasions when a signal may sound during the dryer operation. These five occasions are listed below:

1. End of Cycle Signal

By default, the signal is turned off. If turned on, the signal will sound for three seconds at the end of a cycle.

2. Keypad Depression Signal

By default, this signal is turned on and will sound for a quarter of a second. This signal will sound each time a keypad is pressed.

3. Coin Input/Card Insertion Signal

By default, this signal is turned on and will sound for a quarter of a second each time a coin or card is entered.

4. Serial/Network Command Signal

By default, this signal is turned on and will sound for a quarter of a second each time the control receives a valid serial or network vend command.

5. Signal for Start

By default, this signal is turned on and will sound one second on and one second off for 10 seconds when START LED is flashing after vend price has been satisfied.

How to Program the Audio Signal

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PROG** appears in the display. Press the START (enter) keypad and **RLS H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **Aud io** appears in the display.

4. When **AUD 10** appears in the display press the START (enter) keypad. A number will appear in the display. This number corresponds to the current Audio Signal Programming Value.
5. Locate the desired number in the first column of *Table 8*.
6. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to increase or decrease the current number until correct.

For Example: A user might wish to have the signal sound only when a keypad is pressed. Entering the number **1** in step 5 would turn off all the options except KEYPAD. In this instance, the signal would sound only when a keypad is pressed.

7. Press the START (enter) keypad when the correct number appears in the display. The new value is saved and the next option will appear in the display.

How to Read Signal Value Table

To determine the correct number required to program the Audio Signal, use the following chart. The Signal Value column contains the number required in step 6. The other columns correspond to individual options.

Each column of options contains a unique combination of the words **on** and **off** that indicates if that column's option is turned on or off when the Signal Value is entered. Select the desired combination of options and enter the number found in the Signal Value column.

NOTE: The default setting programmed at the factory is 29.

Signal Value	Start Mode	Serial/ Network Command	Coin/Card In- put	End of Cycle	Key Pressed
0	OFF	OFF	OFF	OFF	OFF
1	OFF	OFF	OFF	OFF	ON
2	OFF	OFF	OFF	ON	OFF
3	OFF	OFF	OFF	ON	ON
4	OFF	OFF	ON	OFF	OFF
5	OFF	OFF	ON	OFF	ON
6	OFF	OFF	ON	ON	OFF
7	OFF	OFF	ON	ON	ON
8	OFF	ON	OFF	OFF	OFF
9	OFF	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON	OFF
11	OFF	ON	OFF	ON	ON
12	OFF	ON	ON	OFF	OFF
13	OFF	ON	ON	OFF	ON
14	OFF	ON	ON	ON	OFF
15	OFF	ON	ON	ON	ON
16	ON	OFF	OFF	OFF	OFF
17	ON	OFF	OFF	OFF	ON
18	ON	OFF	OFF	ON	OFF

Table 8 continues...

Signal Value	Start Mode	Serial/ Network Command	Coin/Card In- put	End of Cycle	Key Pressed
19	ON	OFF	OFF	ON	ON
20	ON	OFF	ON	OFF	OFF
21	ON	OFF	ON	OFF	ON
22	ON	OFF	ON	ON	OFF
23	ON	OFF	ON	ON	ON
24	ON	ON	OFF	OFF	OFF
25	ON	ON	OFF	OFF	ON
26	ON	ON	OFF	ON	OFF
27	ON	ON	OFF	ON	ON
28	ON	ON	ON	OFF	OFF
29	ON	ON	ON	OFF	ON
30	ON	ON	ON	ON	OFF
31	ON	ON	ON	ON	ON

Table 8

Network Node Number *nodE*

This option allows the owner to program a unique number used for wired or wireless communication.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
- Press the LOW TEMP (\wedge) or the DELICATES (\vee) keypad until **Prog** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
- Press the LOW TEMP (\wedge) or the DELICATES (\vee) keypad to scroll through the programmable options until **nodE** appears in the display.
- When **nodE** appears in the display, press the START (enter) keypad. The current Network Node Number status will appear in the display.
- Press the LOW TEMP (\wedge) or the DELICATES (\vee) keypad to change the current status.

NOTE: The Network Node Number can be set from 1 - 250. The default value is 250.

- Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Error Code Programming *Error -*

This option allows the owner to turn on or turn off certain errors in the control.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
- Press the LOW TEMP (\wedge) or the DELICATES (\vee) keypad until **Prog** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
- Press the LOW TEMP (\wedge) or the DELICATES (\vee) keypad to scroll through the programmable options until **Error -** appears in the display.
- When **Error -** appears in the display, press the START (enter) keypad. The control will display **LErr -**. Press the START (enter) keypad. The control will display **LErr 1**.

[Err-]	Coin Error Parameters	
	[Err 1]	Coin Error On/Off – Determines if display will show error.
	[Err 2]	Coin Error Penalty On/Off – If enabled, coin error will erase previous coins entered and reset the vend price.
	[Err 3]	Vend Header Present Error On/Off - If enabled and vend header is unplugged, control ignores coin inputs.
[LrErr]		Clear Error On/Off

Table 9

Display	Coin Error Parameters	
[Err-]	[Err 1]	Coin Error On/Off – Determines if display will show error.
	[Err 2]	Coin Error Penalty On/Off – If enabled, coin error will erase previous coins entered and reset the vend price.
	[Err 3]	Vend Header Present Error On/Off - If enabled and vend header is unplugged, control ignores coin inputs.
E L N i t		Limit Cycles Display On/Off
E FFLN		False Flame Error Display
[LrErr]		Clear Error On/Off

Table 10

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select error code.
6. Press the START (enter) keypad when the correct code appears in the display. The current status will appear in the display.
7. OFF indicates the option is disabled. ON indicates the option is enabled. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the status.

NOTE: The default values for Coin Error and Coin Drops Header are ON. The default value for Coin Error Penalty is OFF.

8. Press the START (enter) keypad when the correct status appears in the display. The new value is saved and the next option in the parameter will appear in the display.

Cool Down Time [dt -

This option allows the owner to set the amount of cool down time for all heat cycles.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PrOG** appears in the display. Press the START (enter) keypad and **RLS H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **CDt -** appears in the display.
4. When **CDt -** appears in the display, press the START (enter) keypad. There are four programmable cool down time options. Refer to *Table 11*.

Display	Cooldown Time Options
CDt 1	High Temp Cooldown Time (1-15)
CDt 2	Medium Temp Cooldown Time (1-15)
CDt 3	Low Temp Cooldown Time (1-15)
CDt 4	Delicates Cooldown Time (1-15)

Table 11

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select the desired cooldown time option.

NOTE: Cooldown time can be set from one (1) to 15 minutes. The default value for each option are as follows: North America : 3 minutes Outside North America : High Temp Cooldown Time - 10 minutes Medium Temp Cooldown Time - 10 Minutes Low Temp Cooldown Time - 8 minutes Delicates Cooldown Time - 6 minutes

NOTE: Cooldown time can be set from one (1) to 15 minutes. The default value for each option is 1 minute.

6. Press the START (enter) keypad when the correct option appears in the display.
7. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the number of minutes displayed to the desired number of minutes.
8. Press the START (enter) keypad when the correct number of minutes appears in the display. The new value is saved and the next option in the parameter will appear in the display.

Time Display Format **tdF**

This option allows the owner to program the time display format.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.

2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PrOG** appears in the display. Press the START (enter) keypad and **RLS H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **tdF** appears in the display.
4. When **tdF** appears in the display, press the START (enter) keypad. The Time Display Format status will appear in the display.

NOTE: The display format can be set to **mm (minutes only) or **mmSS** (minutes and seconds). The default format is **mm**.**

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Temperature **TEMP-**

This option allows the owner to set the temperature of the heat cycles.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PrOG** appears in the display. Press the START (enter) keypad and **RLS H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **TEMP-** appears in the display.
4. When **TEMP-** appears in the display, press the START (enter) keypad. There are four programmable temperature options. Refer to *Table 12*.

Display	Temperature Options
TEMP 1	High Temperature
TEMP 2	Medium Temperature
TEMP 3	Low Temperature
TEMP 4	Delicates Temperature

Table 12

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select the desired temperature option.
6. Press the START (enter) keypad when the correct option appears in the display. Refer to *Table 13* for values.

Temperature Options
100°F [38°C]
105°F [41°C]
110°F [43°C]
115°F [46°C]
120°F [49°C]
125°F [52°C]
130°F [54°C]
135°F [57°C]
140°F [60°C]
145°F [62°C]
150°F [66°C]
155°F [68°C]
160°F [71°C]

Table 13

NOTE: The default values are as follows:

High Temperature = 160°F [71°C]

Medium Temperature = 155°F [68°C]

Low Temperature = 145°F [62°C]

Delicates Temperature = 115°F [46°C]

- Press the LOW TEMP (Λ) or the DELICATES (v) keypad to increase or decrease the current number of degrees displayed in the display to the desired number of degrees.
- Press the START (enter) keypad when the correct number of degrees appears in the display. The new value is saved and the next option in the parameter will appear in the display.

Temperature (Fahrenheit/Celsius) rtc -

This option allows the owner to set whether the display will be shown in Fahrenheit or Celsius.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
- Press the LOW TEMP (Λ) or the DELICATES (v) keypad until Prog appears in the display. Press the START (enter) keypad and rtc H will appear in the display.

- Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options until tP F c appears in the display.
- When tP F c appears in the display, press the START (enter) keypad. A number will appear in the display. This number (found below) corresponds to the current Temperature (Fahrenheit/Celsius) setting. One (1) = Celsius Zero (0) = Fahrenheit

NOTE: The default value is 0.

- Press the LOW TEMP (Λ) or the DELICATES (v) keypad to increase or decrease the current number to the desired number.
- Press the START (enter) keypad when the correct number appears in the display. The new value is saved and the next option will appear in the display.

Set Real-Time Clock rtc -

This option allows the owner to set the control’s internal clock to the correct time and date.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
- Press the LOW TEMP (Λ) or the DELICATES (v) keypad until Prog appears in the display. Press the START (enter) keypad and rtc H will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options until $\text{rtc} -$ appears in the display. Press the START keypad and rtc 1 will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options. Refer to *Table 14*.

Display	Real Time Clock Options
rtc 1	Programs Minutes
rtc 2	Programs Hours
rtc 3	Programs Day of Week
rtc 4	Programs Date of Month
rtc 5	Programs Month
rtc 6	Programs Year

Table 14

- When the desired option appears in the display, press the START (enter) keypad. The current value will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (v) keypad to increase or decrease the minutes, hours, day of week, date of the month, month, year to the correct time or date.

NOTE: The hours will be displayed in military time. For day of week , Sunday is considered day one (001), Monday is day two (002) and so on. For year, the year 2000 is 00, the year 2001 is 01 and so on.

7. Press the START (enter) keypad when the correct time or date appears in the display. The new value is saved and the next Set Real-Time Clock option will appear in the display.

Daylight Savings Time Parameters dL 5 -

This option allows the owner to set the control’s internal clock to the correct daylight savings time and date.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until **Pr09** appears in the display. Press the START (enter) keypad and **Rt5 H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options until **dL 5 -** appears in the display. Press the START keypad and **dL 5 1** will appear in the display.
4. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options. Refer to *Table 15*.

Display	Daylight Savings Options
dL 5 1	Daylight Savings (On/Off)
dL 5 2	Start Month
dL 5 3	Start Day of Week
dL 5 4	Start Week of Month
dL 5 5	Start Hour
dL 5 6	End Month
dL 5 7	End Day of Week
dL 5 8	End Week of Month
dL 5 9	End Hour

Table 15

5. When the desired option appears in the display, press the START (enter) keypad. The current value will appear in the display.
6. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to increase or decrease the minutes, hours, day of week, date of the month, month, year to the correct time or date.

NOTE: The hours will be displayed in military time. For day of week , Sunday is considered day one (001), Monday is day two (002) and so on. For year, the year 2000 is 00, the year 2001 is 01 and so on.

NOTE: Daylight Savings is ON by default. The default parameter values are as follows: Start Month = 3, Start Day of Week = 1, Start Week of Month = 2, Start Hour = 2, End Month = 11, End Day of Week = 1, End week of Month = 1, End Hour = 2

7. Press the START (enter) keypad when the correct time or date appears in the display. The new value is saved and the next Daylight Savings Time option will appear in the display.

Special Vend 1 Parameters SP 1 -

This option allows the owner to set the day or days of a special vend.

Special Vend 1 is used to change the standard vend prices for special occasions. The special vend can be programmed to start and end on a specific day or days of the week.

The owner may also turn the Special Vend 1 option on or off if desired.

How to Program Special Vend 1 Days Enable SP 1 0 1

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until **Pr09** appears in the display. Press the START (enter) keypad and **Rt5 H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options until **SP 1 -** appears in the display. Press the START (enter) keypad and **SP 1 1** will appear in the display.
4. When **SP 1 1** appears in the display, press the START (enter) keypad. A number will appear in the display that corresponds to the current Special Vend 1 Days Enable Programming Value.
5. Locate the desired number in the first column of *Table 16* on the following pages.
6. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to increase or decrease the current number until correct.
7. Press the START (enter) keypad when the correct number appears in the display. The new value is saved and the next Special Vend 1 option will appear in the display.

How to Read Special Vend Value Table

To determine the correct number required to program the Special Vend Days Enable, use the following table. The Special Vend Value column contains the number required in step 6. The other columns correspond to individual days.

Each column of days contains a unique combination of the words **ON** and **OFF** that indicates if that column's day is turned on or off when the value is entered. Select the desired combination of days and enter the number found in the value column.

NOTE: The default value is 0.

SPE- CIAL VEND VALUE	SAT	FRI	THUR	WED	TUE	MON	SUN	ON/OFF
0	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
3	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON
5	OFF	OFF	OFF	OFF	OFF	ON	OFF	ON
7	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
9	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
11	OFF	OFF	OFF	OFF	ON	OFF	ON	ON
13	OFF	OFF	OFF	OFF	ON	ON	OFF	ON
15	OFF	OFF	OFF	OFF	ON	ON	ON	ON
17	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
19	OFF	OFF	OFF	ON	OFF	OFF	ON	ON
21	OFF	OFF	OFF	ON	OFF	ON	OFF	ON
23	OFF	OFF	OFF	ON	OFF	ON	ON	ON
25	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
27	OFF	OFF	OFF	ON	ON	OFF	ON	ON
29	OFF	OFF	OFF	ON	ON	ON	OFF	ON
31	OFF	OFF	OFF	ON	ON	ON	ON	ON
33	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON
35	OFF	OFF	ON	OFF	OFF	OFF	ON	ON
37	OFF	OFF	ON	OFF	OFF	ON	OFF	ON
39	OFF	OFF	ON	OFF	OFF	ON	ON	ON
41	OFF	OFF	ON	OFF	ON	OFF	OFF	ON
43	OFF	OFF	ON	OFF	ON	OFF	ON	ON
45	OFF	OFF	ON	OFF	ON	ON	OFF	ON
47	OFF	OFF	ON	OFF	ON	ON	ON	ON

Table 16 continues...

SPE- CIAL VEND VALUE	SAT	FRI	THUR	WED	TUE	MON	SUN	ON/OFF
49	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
51	OFF	OFF	ON	ON	OFF	OFF	ON	ON
53	OFF	OFF	ON	ON	OFF	ON	OFF	ON
55	OFF	OFF	ON	ON	OFF	ON	ON	ON
57	OFF	OFF	ON	ON	ON	OFF	OFF	ON
59	OFF	OFF	ON	ON	ON	OFF	ON	ON
61	OFF	OFF	ON	ON	ON	ON	OFF	ON
63	OFF	OFF	ON	ON	ON	ON	ON	ON
65	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
67	OFF	ON	OFF	OFF	OFF	OFF	ON	ON
69	OFF	ON	OFF	OFF	OFF	ON	OFF	ON
71	OFF	ON	OFF	OFF	OFF	ON	ON	ON
73	OFF	ON	OFF	OFF	ON	OFF	OFF	ON
75	OFF	ON	OFF	OFF	ON	OFF	ON	ON
77	OFF	ON	OFF	OFF	ON	ON	OFF	ON
79	OFF	ON	OFF	OFF	ON	ON	ON	ON
81	OFF	ON	OFF	ON	OFF	OFF	OFF	ON
83	OFF	ON	OFF	ON	OFF	OFF	ON	ON
85	OFF	ON	OFF	ON	OFF	ON	OFF	ON
87	OFF	ON	OFF	ON	OFF	ON	ON	ON
89	OFF	ON	OFF	ON	ON	OFF	OFF	ON
91	OFF	ON	OFF	ON	ON	OFF	ON	ON
93	OFF	ON	OFF	ON	ON	ON	OFF	ON
95	OFF	ON	OFF	ON	ON	ON	ON	ON
97	OFF	ON	ON	OFF	OFF	OFF	OFF	ON
99	OFF	ON	ON	OFF	OFF	OFF	ON	ON
101	OFF	ON	ON	OFF	OFF	ON	OFF	ON
103	OFF	ON	ON	OFF	OFF	ON	ON	ON
105	OFF	ON	ON	OFF	ON	OFF	OFF	ON

Table 16 *continues...*

SPE- CIAL VEND VALUE	SAT	FRI	THUR	WED	TUE	MON	SUN	ON/OFF
107	OFF	ON	ON	OFF	ON	OFF	ON	ON
109	OFF	ON	ON	OFF	ON	ON	OFF	ON
111	OFF	ON	ON	OFF	ON	ON	ON	ON
113	OFF	ON	ON	ON	OFF	OFF	OFF	ON
115	OFF	ON	ON	ON	OFF	OFF	ON	ON
117	OFF	ON	ON	ON	OFF	ON	OFF	ON
119	OFF	ON	ON	ON	OFF	ON	ON	ON
121	OFF	ON	ON	ON	ON	OFF	OFF	ON
123	OFF	ON	ON	ON	ON	OFF	ON	ON
125	OFF	ON	ON	ON	ON	ON	OFF	ON
127	OFF	ON	ON	ON	ON	ON	ON	ON
129	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON
131	ON	OFF	OFF	OFF	OFF	OFF	ON	ON
133	ON	OFF	OFF	OFF	OFF	ON	OFF	ON
135	ON	OFF	OFF	OFF	OFF	ON	ON	ON
137	ON	OFF	OFF	OFF	ON	OFF	OFF	ON
139	ON	OFF	OFF	OFF	ON	OFF	ON	ON
141	ON	OFF	OFF	OFF	ON	ON	OFF	ON
143	ON	OFF	OFF	OFF	ON	ON	ON	ON
145	ON	OFF	OFF	ON	OFF	OFF	OFF	ON
147	ON	OFF	OFF	ON	OFF	OFF	ON	ON
149	ON	OFF	OFF	ON	OFF	ON	OFF	ON
151	ON	OFF	OFF	ON	OFF	ON	ON	ON
153	ON	OFF	OFF	ON	ON	OFF	OFF	ON
155	ON	OFF	OFF	ON	ON	OFF	ON	ON
157	ON	OFF	OFF	ON	ON	ON	OFF	ON
159	ON	OFF	OFF	ON	ON	ON	ON	ON
161	ON	OFF	ON	OFF	OFF	OFF	OFF	ON
163	ON	OFF	ON	OFF	OFF	OFF	ON	ON
165	ON	OFF	ON	OFF	OFF	ON	OFF	ON

Table 16 *continues...*

SPE- CIAL VEND VALUE	SAT	FRI	THUR	WED	TUE	MON	SUN	ON/OFF
167	ON	OFF	ON	OFF	OFF	ON	ON	ON
169	ON	OFF	ON	OFF	ON	OFF	OFF	ON
171	ON	OFF	ON	OFF	ON	OFF	ON	ON
173	ON	OFF	ON	OFF	ON	ON	OFF	ON
175	ON	OFF	ON	OFF	ON	ON	ON	ON
177	ON	OFF	ON	ON	OFF	OFF	OFF	ON
179	ON	OFF	ON	ON	OFF	OFF	ON	ON
181	ON	OFF	ON	ON	OFF	ON	OFF	ON
183	ON	OFF	ON	ON	OFF	ON	ON	ON
185	ON	OFF	ON	ON	ON	OFF	OFF	ON
187	ON	OFF	ON	ON	ON	OFF	ON	ON
189	ON	OFF	ON	ON	ON	ON	OFF	ON
191	ON	OFF	ON	ON	ON	ON	ON	ON
193	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
195	ON	ON	OFF	OFF	OFF	OFF	ON	ON
197	ON	ON	OFF	OFF	OFF	ON	OFF	ON
199	ON	ON	OFF	OFF	OFF	ON	ON	ON
201	ON	ON	OFF	OFF	ON	OFF	OFF	ON
203	ON	ON	OFF	OFF	ON	OFF	ON	ON
205	ON	ON	OFF	OFF	ON	ON	OFF	ON
207	ON	ON	OFF	OFF	ON	ON	ON	ON
209	ON	ON	OFF	ON	OFF	OFF	OFF	ON
211	ON	ON	OFF	ON	OFF	OFF	ON	ON
213	ON	ON	OFF	ON	OFF	ON	OFF	ON
215	ON	ON	OFF	ON	OFF	ON	ON	ON
217	ON	ON	OFF	ON	ON	OFF	OFF	ON
219	ON	ON	OFF	ON	ON	OFF	ON	ON
221	ON	ON	OFF	ON	ON	ON	OFF	ON
223	ON	ON	OFF	ON	ON	ON	ON	ON
225	ON	ON	ON	OFF	OFF	OFF	OFF	ON

Table 16 *continues...*

SPE- CIAL VEND VALUE	SAT	FRI	THUR	WED	TUE	MON	SUN	ON/OFF
227	ON	ON	ON	OFF	OFF	OFF	ON	ON
229	ON	ON	ON	OFF	OFF	ON	OFF	ON
231	ON	ON	ON	OFF	OFF	ON	ON	ON
233	ON	ON	ON	OFF	ON	OFF	OFF	ON
235	ON	ON	ON	OFF	ON	OFF	ON	ON
237	ON	ON	ON	OFF	ON	ON	OFF	ON
239	ON	ON	ON	OFF	ON	ON	ON	ON
241	ON	ON	ON	ON	OFF	OFF	OFF	ON
243	ON	ON	ON	ON	OFF	OFF	ON	ON
245	ON	ON	ON	ON	OFF	ON	OFF	ON
247	ON	ON	ON	ON	OFF	ON	ON	ON
249	ON	ON	ON	ON	ON	OFF	OFF	ON
251	ON	ON	ON	ON	ON	OFF	ON	ON
253	ON	ON	ON	ON	ON	ON	OFF	ON
255	ON	ON	ON	ON	ON	ON	ON	ON

Table 16

How to Program Special Vend 1 Start Minute *SP 1 2*

This option allows the owner to set the minute that Special Vend 1 will begin.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until *SP 1 2* appears in the display.
2. When *SP 1 2* appears in the display, press the START (enter) keypad. The current start minute will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the start minute to the desired minute.

NOTE: The value can be set from 0-59. The default value is 0.

4. Press the START (enter) keypad when the correct minute appears in the display. The new value is saved and the next Special Vend 1 option, *SP 1 3*, will appear in the display.

How to Program Special Vend 1 Start Hour *SP 1 3*

This option allows the owner to set the hour that Special Vend 1 will begin.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until *SP 1 3* appears in the display.
2. When *SP 1 3* appears in the display, press the START (enter) keypad. The current start hour will appear in the display.
NOTE: The hours will be displayed in military time.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the start hour to the desired hour.
NOTE: The value can be set from 0-23 hours. The default value is 0.
4. Press the START (enter) keypad when the correct hour appears in the display. The new value is saved and the next Special Vend 1 option, *SP 1 4*, will appear in the display.

How to Program Special Vend 1 Start Date *SP 1 4*

This allows the owner to set the start date for Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until *SP 1 4* appears in the display.
2. When *SP 1 4* appears in the display, press the START (enter) keypad. The current start date will appear in the display.

3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current start date to the desired start date.

If **0** is selected and Special Vend 1 is on, Special Vend 1 will occur at the time and days of week selected, regardless of the date.

NOTE: The value can be set 0 (OFF) or from 1-31. The default value is 0.

4. Press the START (enter) keypad when the correct start date appears in the display. The new value is saved and the next Special Vend 1 option, **SP I 5**, will appear in the display.

How to Program Special Vend 1 Start Month **SP I 5**

This option allows the owner to set the month that Special Vend 1 will begin.

NOTE: If Special Vend 1 Start Month, Start Date, End Month, or End Date are programmed to zero (default is zero), the Special Vend 1 will be active every week on the days programmed in Table 16 .

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until **SP I 5** appears in the display.
2. When **SP I 5** appears in the display, press the START (enter) keypad. The current start month will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the start month to the desired month.

If **0** is selected and Special Vend 1 is on, Special Vend 1 will occur at the time and days of week selected, regardless of the month.

NOTE: The value can be set at 0 (off) or from 1-12. The default value is 0.

4. Press the START (enter) keypad when the correct month appears in the display. The new value is saved and the next Special Vend 1 option, **SP I 6**, will appear in the display.

How to Program Special Vend 1 Start Year **SP I 6**

This option allows the owner to set the year that Special Vend 1 will begin.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until **SP I 6** appears in the display.
2. When **SP I 6** appears in the display, press the START (enter) keypad. The current start year will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the start year to the desired year.

If the start/end date or month are set to **0**, the year is ignored. **01** is year 2001. **02** is year 2002, and so on.

NOTE: The value can be set from 0-99. The default value is 0.

4. Press the START (enter) keypad when the correct year appears in the display. The new value is saved and the next Special Vend 1 option, **SP I 7**, will appear in the display.

How to Program Special Vend 1 Length in Hours **SP I 7**

This option allows the owner to set length in hours of Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until **SP I 7** appears in the display.
2. When **SP I 7** appears in the display, press the START (enter) keypad. The current length in hours will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the length in hours to the desired length in hours.

NOTE: The value can be set from 0-24. The default value is 0.

4. Press the START (enter) keypad when the correct length in hours appears in the display. The new value is saved and the next Special Vend 1 option, **SP I 8**, will appear in the display.

How to Program Special Vend 1 End Date **SP I 8**

This option allows the owner to set the date that Special Vend 1 will end.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until **SP I 8** appears in the display.
2. When **SP I 8** appears in the display, press the START (enter) keypad. The current end date will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the end date to the desired date.

If **0** is selected and Special Vend 1 is on, Special Vend 1 will occur at the time and day of week selected, regardless of the date.

NOTE: The value can be set at 0 (off) or from 1-31. The default value is 0.

4. Press the START (enter) keypad when the correct date appears in the display. The new value is saved and the next Special Vend 1 option, **SP I 9**, will appear in the display.

How to Program Special Vend 1 End Month **SP I 9**

This option allows the owner to set the month that Special Vend 1 will end.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until **SP I 9** appears in the display.
2. When **SP I 9** appears in the display, press the START (enter) keypad. The current end month will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the end month to the desired month.

If **0** is selected and Special Vend 1 is on, Special Vend 1 will occur at the time and days of week selected, regardless of the month.

NOTE: The value can be set at 0 (off) or from 1-12. The default value is 0.

4. Press the START (enter) keypad when the correct month appears in the display. The new value is saved and the next Special Vend 1 option, **SP 1 10**, will appear in the display.

How to Program Special Vend 1 End Year **SP 1 10**

This option allows the owner to set the year that Special Vend 1 will end.

1. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to scroll through the programmable Special Vend 1 options until **SP 1 10** appears in the display.
2. When **SP 1 10** appears in the display, press the START (enter) keypad. The current end year will appear in the display.
3. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to increase or decrease the end year to the desired year.

If the start/end date or month are set to **0**, the year is ignored. **0 1** is year 2001, **02** is year 2002 and so on.

NOTE: The value can be set from 0-99. The default value is 0.

4. Press the START (enter) keypad when the correct year appears in the display. The new value is saved and the next Special Vend 1 option, **SP 1 11**, will appear in the display.

How to Program Special Vend 1 Heat Cycle Vend Price **SP 1 11**

This option allows the owner to set the vend price for a heat cycle in Special Vend 1.

1. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to scroll through the programmable Special Vend 1 options until **SP 1 11** appears in the display.
2. When **SP 1 11** appears in the display, press the START (enter) keypad. There are five digits in the Special Vend 1 Heat Price.
3. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to increase or decrease the value of the fifth digit.

NOTE: The vend price can be set from 0 to 65,535. The default value is 0.

4. Press the START (enter) keypad to enter the fifth digit and display remaining four digits. The active digit will flash one second on and one second off.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

5. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to increase or decrease the value of the active digit and the START (enter) keypad to enter the value of the digit and advance to the next digit.

6. Press the START (enter) keypad with the last active digit. The new value is saved and the next Special Vend 1 option, **SP 1 12**, will appear in the display.

How to Program Special Vend 1 Heat Cycle Time Minutes **SP 1 12**

This option allows the owner to set minutes for a heat cycle in Special Vend 1.

1. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to scroll through the programmable Special Vend 1 options until **SP 1 12** appears in the display.
2. When **SP 1 12** appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to increase or decrease the current number to the desired number of minutes.

NOTE: The value can be set from 1-99 minutes. The default value is 1.

4. Press the START (enter) keypad when the correct number of minutes is displayed. The new value is saved and the next Special Vend 1 option, **SP 1 13**, will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 1 Heat Cycle Time Seconds **SP 1 13**

This option allows the owner to set the seconds for a heat cycle in Special Vend 1.

1. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to scroll through the programmable Special Vend 1 options until **SP 1 13** appears in the display.
2. When **SP 1 13** appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (**Λ**) or the DELICATES (**V**) keypad to increase or decrease the current number to the desired number.

NOTE: The value can be set from 0 to 59 seconds. The default value is 0.

4. Press the START (enter) keypad when the correct number of seconds is displayed. The new value is saved and the next Special Vend 1 option, **SP 1 14**, will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 1 No Heat Cycle Vend Price **SP 1 14**

This option allows the owner to set the vend price for a no heat cycle in Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until *SP 1 14* appears in the display.
2. When *SP 1 14* appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number.

NOTE: The vend price can be set from 0 to 65,535. The default value is 0.

4. Press the START (enter) keypad when the correct number is displayed. The new value is saved and the next Special Vend 1 option, *SP 1 15*, will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 1 No Heat Cycle Time Minutes *SP 1 15*

This option allows the owner to set the minutes for a no heat cycle in Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until *SP 1 15* appears in the display.
2. When *SP 1 15* appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number of minutes.

NOTE: The value can be set from 1-99 minutes. The default value is 1.

4. Press the START (enter) keypad when the correct number of minutes is displayed. The new value is saved and the next Special Vend 1 option, *SP 1 16*, will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 1 No Heat Cycle Time Seconds *SP 1 16*

This option allows the owner to set the seconds for a no heat cycle in Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until *SP 1 16* appears in the display.
2. When *SP 1 16* appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number of minutes.

NOTE: The value can be set from 0 to 59 seconds. The default value is 0.

4. Press the START (enter) keypad when the correct number of minutes is displayed. The new value is saved and the next Special Vend 1 option, *SP 1 17*, will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 1 Coin Topoff Time Minutes *SP 1 17*

This option allows the owner to set the minutes for Coin 1 Topoff in Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until *SP 1 17* appears in the display.
2. When *SP 1 17* appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number of minutes.

NOTE: The value can be set from 0-99 minutes. The default value is 1.

4. Press the START (enter) keypad when the correct number of minutes is displayed. The new value is saved and the next Special Vend 1 option, *SP 1 18*, will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 1 Coin 1 Topoff Time Seconds *SP 1 18*

This option allows the owner to set the seconds for Coin 1 Topoff in Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until *SP 1 18* appears in the display.
2. When *SP 1 18* appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number of seconds.

NOTE: The value can be set from 0-59 seconds. The default value is 0.

4. Press the START (enter) keypad when the correct number of seconds is displayed. The new value is saved and the next Special Vend 1 option, *SP 1 19*, will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 1 Coin 2 Topoff Time Minutes *SP 1 19*

This option allows the owner to set the minutes for Coin 2 Topoff in Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until **SP 1 19** appears in the display.
2. When **SP 1 19** appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number of minutes.

NOTE: The value can be set from 0-99 minutes. The default value is 1.

4. Press the START (enter) keypad when the correct number of minutes is displayed. The new value is saved and the next Special Vend 1 option, **SP 1 20**, will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 1 Coin 2 Topoff Time Seconds **SP 1 20**

This option allows the owner to set the seconds for Coin 2 Topoff in Special Vend 1.

1. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable Special Vend 1 options until **SP 1 20** appears in the display.
2. When **SP 1 20** appears in the display, press the START (enter) keypad.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to increase or decrease the current number to the desired number of seconds.

NOTE: The value can be set from 0-59 seconds. The default value is 0.

4. Press the START (enter) keypad when the correct number of seconds is displayed. The new value is saved and the next Special Vend 2 option will appear in the display.

NOTE: To go back to the current programmable Special Vend 1 option without changing the value, press the MED TEMP (<) keypad.

How to Program Special Vend 2 Days Enable **SP2**

This option allows the owner to enable or disable a second special vend.

Special Vend 2 can be programmed using an external device or network.

The owner may also turn the Special Vend 2 option on or off if desired.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.

2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PROG** appears in the display. Press the START (enter) keypad and **RES H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **SP2** appears in the display.
4. When **SP2** appears in the display, press the START (enter) keypad. The control displays **on** or **OFF** for this parameter.
NOTE: The default value is OFF.
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select **on** or **OFF**.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option, **SP3**, will appear in the display.

How to Program Special Vend 3 Days Enable **SP3**

This option allows the owner to enable or disable a third special vend.

Special Vend 3 can be programmed using an external device or network.

The owner may also turn the Special Vend 3 option on or off if desired.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **PROG** appears in the display. Press the START (enter) keypad and **RES H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **SP3** appears in the display.
4. When **SP3** appears in the display, press the START (enter) keypad. The control displays **on** or **OFF** for this parameter.
NOTE: The default value is OFF.
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select **on** or **OFF**.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option, **SP4**, will appear in the display.

How to Program Special Vend 4 Days Enable **SP4**

This option allows the owner to enable or disable a fourth special vend.

Special Vend 4 can be programmed using an external device or network.

The owner may also turn the Special Vend 4 option on or off if desired.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **Pr09** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **SP4** appears in the display.
- When **SP4** appears in the display, press the START (enter) keypad. The control displays **on** or **oFF** for this parameter.
NOTE: The default value is oFF.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select **on** or **oFF**.
- Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option, **rEu-**, will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **Pr09** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **LPAS 2** appears in the display.
- When **LPAS 2** appears in the display, press the START (enter) keypad. The current Low Power/Auto Shutdown 2 Days Enable status will appear in the display. **on** = Option Enabled
oFF = Option Disabled
NOTE: The default value is oFF.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select **on** or **oFF**.
- Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option, **LPAS 3**, will appear in the display.

Low Power-Auto Shutdown 1 Days Enable LPAS 1

This option allows the owner to enable or disable Low Power/Auto Shutdown. Low Power or Auto Shutdown duration are programmed using an external device or network.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **Pr09** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **LPAS 1** appears in the display.
- When **LPAS 1** appears in the display, press the START (enter) keypad. The current Low Power/Auto Shutdown 1 Days Enable status will appear in the display. **on** = Option Enabled
oFF = Option Disabled
NOTE: The default value is oFF.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select **on** or **oFF**.
- Press the START (enter) keypad when the correct number appears in the display. The new value is saved and the next option, **LPAS 2**, will appear in the display.

Low Power-Auto Shutdown 2 Days Enable LPAS 2

This option allows the owner to enable or disable Low Power/Auto Shutdown. Low Power or Auto Shutdown duration are programmed using an external device or network.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.

Low Power-Auto Shutdown 3 Days Enable LPAS 3

This option allows the owner to enable or disable Low Power/Auto Shutdown. Low Power or Auto Shutdown duration are programmed using an external device or network.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad until **Pr09** appears in the display. Press the START (enter) keypad and **RL5 H** will appear in the display.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **LPAS 3** appears in the display.
- When **LPAS 3** appears in the display, press the START (enter) keypad. The current Low Power/Auto Shutdown 3 Days Enable status will appear in the display. **on** = Option Enabled
oFF = Option Disabled
NOTE: The default value is oFF.
- Press the LOW TEMP (Λ) or the DELICATES (V) keypad to select **on** or **oFF**.
- Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option, **LPAS 4**, will appear in the display.

Low Power-Auto Shutdown 4 Days Enable LPAS 4

This option allows the owner to enable or disable Low Power/Auto Shutdown. Low Power or Auto Shutdown duration are programmed using an external device or network.

- Control must be in Manual Mode. Refer to *Entering the Manual Mode*.

2. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until **P r o g** appears in the display. Press the START (enter) keypad and **R t S H** will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options until **L P R S 4** appears in the display.
4. When **L P R S 4** appears in the display, press the START (enter) keypad. The current Low Power/Auto Shutdown 4 Days Enable status will appear in the display. **o n** = Option Enabled **o F F** = Option Disabled
NOTE: The default value is o F F.
5. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Power Fail Reset **P F r S t**

This option allows the owner to set the amount of time the control will store active cycle information in the event of a power failure. The default setting for Power Fail Reset is OFF. If Power Fail Reset is turned OFF, the cycle will be saved.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until **P r o g** appears in the display. Press the START (enter) keypad and **R t S H** will appear in the display.

DISPLAY TO ENTER IN STEP 6	POWER FAIL RESET TIME
o F F	Turned OFF. Cycle will be saved.
0	5 seconds without power before cycle and vend are lost
1	1 minute without power before cycle and vend are lost
... add one minute for every number up to	
120	120 minutes without power before cycle and vend are lost

Table 17

IR Access (On/Off) **i r A E n**

This option allows the owner to enable or disable allowing the control to be read by an external device.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until **P r o g** appears in the display. Press the START (enter) keypad and **R t S H** will appear in the display.

3. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options until **P F r S t** appears in the display.
4. When **P F r S t** appears in the display, press the START (enter) keypad. A number will appear in the display. This number corresponds to the current Power Fail Reset setting.
5. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to increase or decrease the current number to the desired number selected from *Table 17*.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

How to Read Power Fail Reset Table

Use this table to set the amount of time for Power Fail Reset.

o F F turns the option OFF. The current cycle status will be saved. When power is restored, the cycle will begin where it was interrupted.

If 0 is entered, the current cycle will be saved for up to five seconds. If power is not restored within five seconds, the control will erase the cycle status. The minimum power failure time is five seconds. The maximum power fail reset time is 120 minutes.

NOTE: The default value is o F F.

3. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the programmable options until **i r A E n** appears in the display.
4. When **i r A E n** appears in the display, press the START (enter) keypad. The current IR Access status will appear in the display. **o n** = Option Enabled **o F F** = Option Disabled
NOTE: The default value is o n.
5. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to change the current status.

6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Manual Rapid Advance *rRPdEn*

This option allows the owner to enable or disable the rapid advance feature. The three options are on, off with a passcode or off with no passcode (disabled). Refer to Rapid Advance Feature section for more information.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *RtS H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *rRPdEn* appears in the display.
4. When *rRPdEn* appears in the display, press the START (enter) keypad. The current Manual Rapid Advance status will appear in the display. *on* = Option Enabled *oFF* = Option Disabled

NOTE: The default value is *on*.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Manual Diagnostics *d,AGEn*

This option allows the owner to enable or disable the manual diagnostics option. The three options are on, off with a passcode or off with no passcode (disabled). Refer to Testing Machine and Electronic Control Functions section for more information.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *RtS H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *d,AGEn* appears in the display.
4. When *d,AGEn* appears in the display, press the START (enter) keypad. The current Manual Diagnostics status will appear in the display. *on* = Option Enabled *oFF* = Option Disabled

NOTE: The default value is *on*.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Factory Test Cycle (On/Off) *Ft En*

This option allows the owner to enable or disable access to the production test cycle. Refer to Production Test Cycle section for more information.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
 2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *RtS H* will appear in the display.
 3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *Ft En* appears in the display.
 4. When *Ft En* appears in the display, press the START (enter) keypad. The current Production Test Cycle status will appear in the display. *on* = Option Enabled *oFF* = Option Disabled
- NOTE: The default value is *on*.**
5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
 6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Lucky Cycle *LUC -*

This option allows the owner to program the machine to provide a free or reduced vend cycle to users after a certain number of machine cycles have occurred.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *RtS H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *LUC -* appears in the display.
4. When *LUC -* appears in the display, press the START (enter) keypad. There are three programmable Lucky Cycle options. Refer to *Table 18*.

Display	Lucky Cycle Options
<i>LUC 1</i>	Lucky Cycle Day(s) of Week Enable On/Off
<i>LUC 2</i>	Lucky Cycle Number (0-255)
<i>LUC 3</i>	Lucky Cycle Display Option On/Off

Table 18

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.

NOTE: The default values are as follows: Lucky Cycle Day(s) of the Week Enable = Disabled, Lucky Cycle Number = 50, Lucky Display Option On/Off = Off

6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Heating Indicator Decimal Point *Ht dP*

This option allows the owner to enable or disable the heating indicator decimal point on the machine.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *Ht5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *Ht dP* appears in the display.
4. When *Ht dP* appears in the display, press the START (enter) keypad. The current Heating Indicator Decimal Point Enable/Disable status will appear in the display. *on* = Option Enabled *off* = Option Disabled

NOTE: The default value is *off*.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Programmable Close Door-Lid Display

PcDL d

This option allows the owner to enable or disable the Close Door/Lid Display. When enabled this option will display a command to close door once vend has been satisfied along with the cycle time

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *Ht5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *PcDL d* appears in the display.
4. When *PcDL d* appears in the display, press the START (enter) keypad. The current Close Door/Lid Display status will appear in the display. *on* = Option Enabled *off* = Option Disabled

NOTE: The default value is *on*.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.

6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Programmable Push Start Display *PPSt d*

This option allows the owner to enable or disable the Push Start Display. When enabled this option will display a command to push start once vend has been satisfied along with the cycle time

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *Ht5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *PPSt d* appears in the display.
4. When *PPSt d* appears in the display, press the START (enter) keypad. The current Push Start Display status will appear in the display. *on* = Option Enabled *off* = Option Disabled

NOTE: The default value is *on*.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Programmable Open Door Display

PodL d

This option allows the owner to enable or disable the Open Door/Lid Display. When enabled this option will display a command to open door once vend has been satisfied along with the cycle time

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *Ht5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *PodL d* appears in the display.
4. When *PodL d* appears in the display, press the START (enter) keypad. The current Open Door/Lid Display status will appear in the display. *on* = Option Enabled *off* = Option Disabled

NOTE: The default value is *on*.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.

6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Vend Price Display Override *RL5 do*

This option allows the owner to override the previously set vend price

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *RL5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *RL5 do* appears in the display.
4. When *RL5 do* appears in the display, press the START (enter) keypad. The current Vend Price Override status will appear in the display. *on* = Option Enabled *off* = Option Disabled

NOTE: The default value is *off*.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

OPL Parameters *oPL -*

This option allows the owner to enable or disable the OPL Parameters in which no vend price needs to be satisfied to operate the machine.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *RL5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *oPL -* appears in the display.
4. When *oPL -* appears in the display, press the START (enter) keypad. There are two programmable OPL Parameter options. Refer to *Table 19*.

Display	OPL Parameter Options
<i>oPL 1</i>	OPL Mode Enable (On/Off)

Table 19 *continues...*

Display	OPL Parameter Options
<i>oPL 3</i>	OPL Display Power Save On/Off

Table 19

NOTE: The default values are as follows: OPL Mode Enable = Off, OPL Display Power Save = On

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Drop Off Mode (On/Off) *droP*

This option allows the owner to limit machine use to an attendant without requiring vend.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *RL5 H* will appear in the display.
3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until *droP* appears in the display.
4. When *droP* appears in the display, press the START (enter) keypad. The current Drop Off Mode (On/Off) Status will appear in the display. *on* = Option Enabled *off* = Option Disabled

NOTE: The default value is *off*.

When the Drop Off Mode is enabled, starting the machine requires the correct sequence of four keypad presses. The default sequence programmed at the factory is HIGH TEMP, LOW TEMP, MED TEMP, DELICATES.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Out of Order (On/Off) *oUt*

This option allows the owner to disable machine use to an attendant by displaying an out of order message.

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (V) keypad until *PrOG* appears in the display. Press the START (enter) keypad and *RL5 H* will appear in the display.

Programming Control

3. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to scroll through the programmable options until **oUt** appears in the display.
4. When **oUt** appears in the display, press the START (enter) keypad. The current Out of Order (On/Off) Status will appear in the display. **on** = Option Enabled **oFF** = Option Disabled

NOTE: The default value is oFF.

5. Press the LOW TEMP (Λ) or the DELICATES (V) keypad to change the current status.
6. Press the START (enter) keypad when the desired status appears in the display. The new value is saved and the next option will appear in the display.

Collecting Audit Information

This feature allows the owner to retrieve audit information stored in the tumble dryer by pressing a sequence of pads on the control. For an explanation of the audit options available, refer to the Audit Options List.

How to Enter Audit Feature

There are two methods the owner can use to enter the Audit Feature.

Entering the Audit Feature by Manual Mode

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until *AUDIT* appears.
3. Press the START keypad. *CYCLES* will appear.

If the procedure did not work, the control will return to the Ready Mode.

Entering the Audit Feature with the Coin Vault Open

1. Open coin vault. The service door must be closed, and have remained closed for 4.25 minutes.
2. Press the START (enter) keypad.

How to Read Audit Data

1. Use the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the various options until the desired option is shown in the display. Refer to the Audit Options List, *Table 20*, for an explanation of the audit options available.

Audit Options List	
Display	Description
<i>CYCLES</i>	Total # of machine cycles
<i>Co in 1</i>	Total # of coins #1
<i>Co in 2</i>	Total # of coins #2
<i>PULSE</i>	Total # of start pulses
<i>Co 1</i>	Total # of coin 1 top-offs
<i>Co 2</i>	Total # of coin 2 top-offs
<i>Co PLS</i>	Total # of start pulse/card reader top-offs

Table 20 *continues...*

Audit Options List	
<i>rRP id</i>	Total # of rapid advance cycles
<i>rUnHrs</i>	Total # of run hours
<i>rCo in 1</i>	Total # of resettable coin #1 counts
<i>rCo in 2</i>	Total # of resettable coin #2 counts
<i>rCYcl E</i>	Total # of resettable machine cycle counts

Table 20

2. Once the desired option appears in the display, press the START (enter) keypad **once** to start the audit count. At this point, the display will show the first four-digit segment of the audit value. If the audit count is 10,000 or higher, press the START (enter) keypad again to view the last four digits of the number.

For Example: In the Total Number of Coins #1 option with *dEn 1* shown in the display, the audit has counted 10,009 coins. Pressing the START (enter) keypad one time will show *_ _ _ 1* to represent ten thousand. Pressing the START (enter) keypad a second time will display *0009* meaning nine. The total equals *000 10009* or 10,009.

3. Press the START (enter) keypad again. The control will go to the next audit option in the Audit Options List.
4. To select other audit options, repeat steps 1 – 4.

How to Exit Audit Feature

Press the MED TEMP (<) keypad until the control returns to Ready Mode.

NOTE: To exit Audit Feature when using Coin Vault method, owner must close coin vault.

Manual Reset

This feature allows the owner to reset the dryer control's programming data to the factory default settings by pressing a sequence of pads on the control. For an explanation of the Factory Default Settings, refer to Default Dryer Settings.

How to Enter Manual Reset

1. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until **rESEt** appears.
3. Press the START (enter) keypad. The display will show **no**. Use the LOW TEMP (Λ) or the DELICATES (v) keypad to change to **YES**. If START (enter) keypad is pressed while **YES** is selected, the control will reset the programming parameters to the factory default values and then display **d 199**. If **no** is selected, no change to programming will be made.

Testing Machine and Electronic Control Functions

This feature allows the owner to run diagnostic tests on various dryer operations without servicing the dryer. The following tests are available:

- Control Software Version Number
- Input/Output Board Software Number
- Service Door Opening Test
- Coin Vault Opening Test
- Coin Drop #1 Input Test
- Coin Drop #2 Input Test
- Vend Header Present Status Test
- Start Pulse Test
- Dryer-on Temperature Test
- Door Switch Input Test
- Thermistor Temperature Test
- Machine Configuration #1 Display Test
- Machine Configuration #2 Display Test
- Machine Configuration #3 Display Test
- Machine Configuration #4 Display Test
- Machine Configuration #5 Display Test

For an overview of the manual diagnostic test feature, refer to the flowchart on the following page.

How To Enter Testing Feature

1. Control must be in Ready Mode. If it is not, rapid advance through a cycle, refer to *Rapid Advance Feature*, or if coins or a card has been entered, refer to *Clearing the Vend Feature*.

2. Control must be in Manual Mode. Refer to *Entering the Manual Mode*.
3. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until **d 19** appears.
4. Press the START (enter) keypad. Display will change to **d 1** indicating the control software version number test.
5. Press the LOW TEMP (Λ) or the DELICATES (v) keypad to scroll through the diagnostic test options.

How to Start Tests

To start a diagnostic test, refer to the quick reference chart (*Table 1*). Press the START (enter) keypad when the desired test number is displayed. For detailed information on each test, read the appropriate description.

How to Exit Testing Feature

Press the MED TEMP (<) keypad. The display will return to Ready mode.

Diagnostic (Testing) Mode – Quick Reference Chart		
Test Number	Diagnostic Mode	Display
d 1	Control Software Version # Test	5 HHH
d 2	Input/Output Board Software Number	ab HH
d 8	Service Door Opening Test	5 aP or 5 CL
d 9	Coin Vault Opening Test	U aP or U CL
d 10	Coin Drop #1 Input Test	C 1 HH
d 11	Coin Drop #2 Input Test	C2 HH
d 12	Vend Header Present Status Test	CHaP (Open) or CHCL (Closed)

Table 21 continues...

Diagnostic (Testing) Mode – Quick Reference Chart		
<i>d 13</i>	Start Pulse Test	<i>5E HH</i>
<i>d 14</i>	Dryer-on Temperature Test	<i>HHHF or HHHC</i>
<i>d 15</i>	Door Switch Input Test	<i>dr oP, dr CL</i>
<i>d 19</i>	Thermistor Temperature Test	<i>HHHP, HHHC, SHorE or oPEn</i>
<i>d 29</i>	Machine Configuration #1 Display Test	<i>A HHH</i>
<i>d 30</i>	Machine Configuration #2 Display Test	<i>b HHH</i>
<i>d 31</i>	Machine Configuration #3 Display Test	<i>C HHH</i>
<i>d 32</i>	Machine Configuration #4 Display Test	<i>d HHH</i>
<i>d 33</i>	Machine Configuration #5 Display Test	<i>E HHH</i>

Table 21

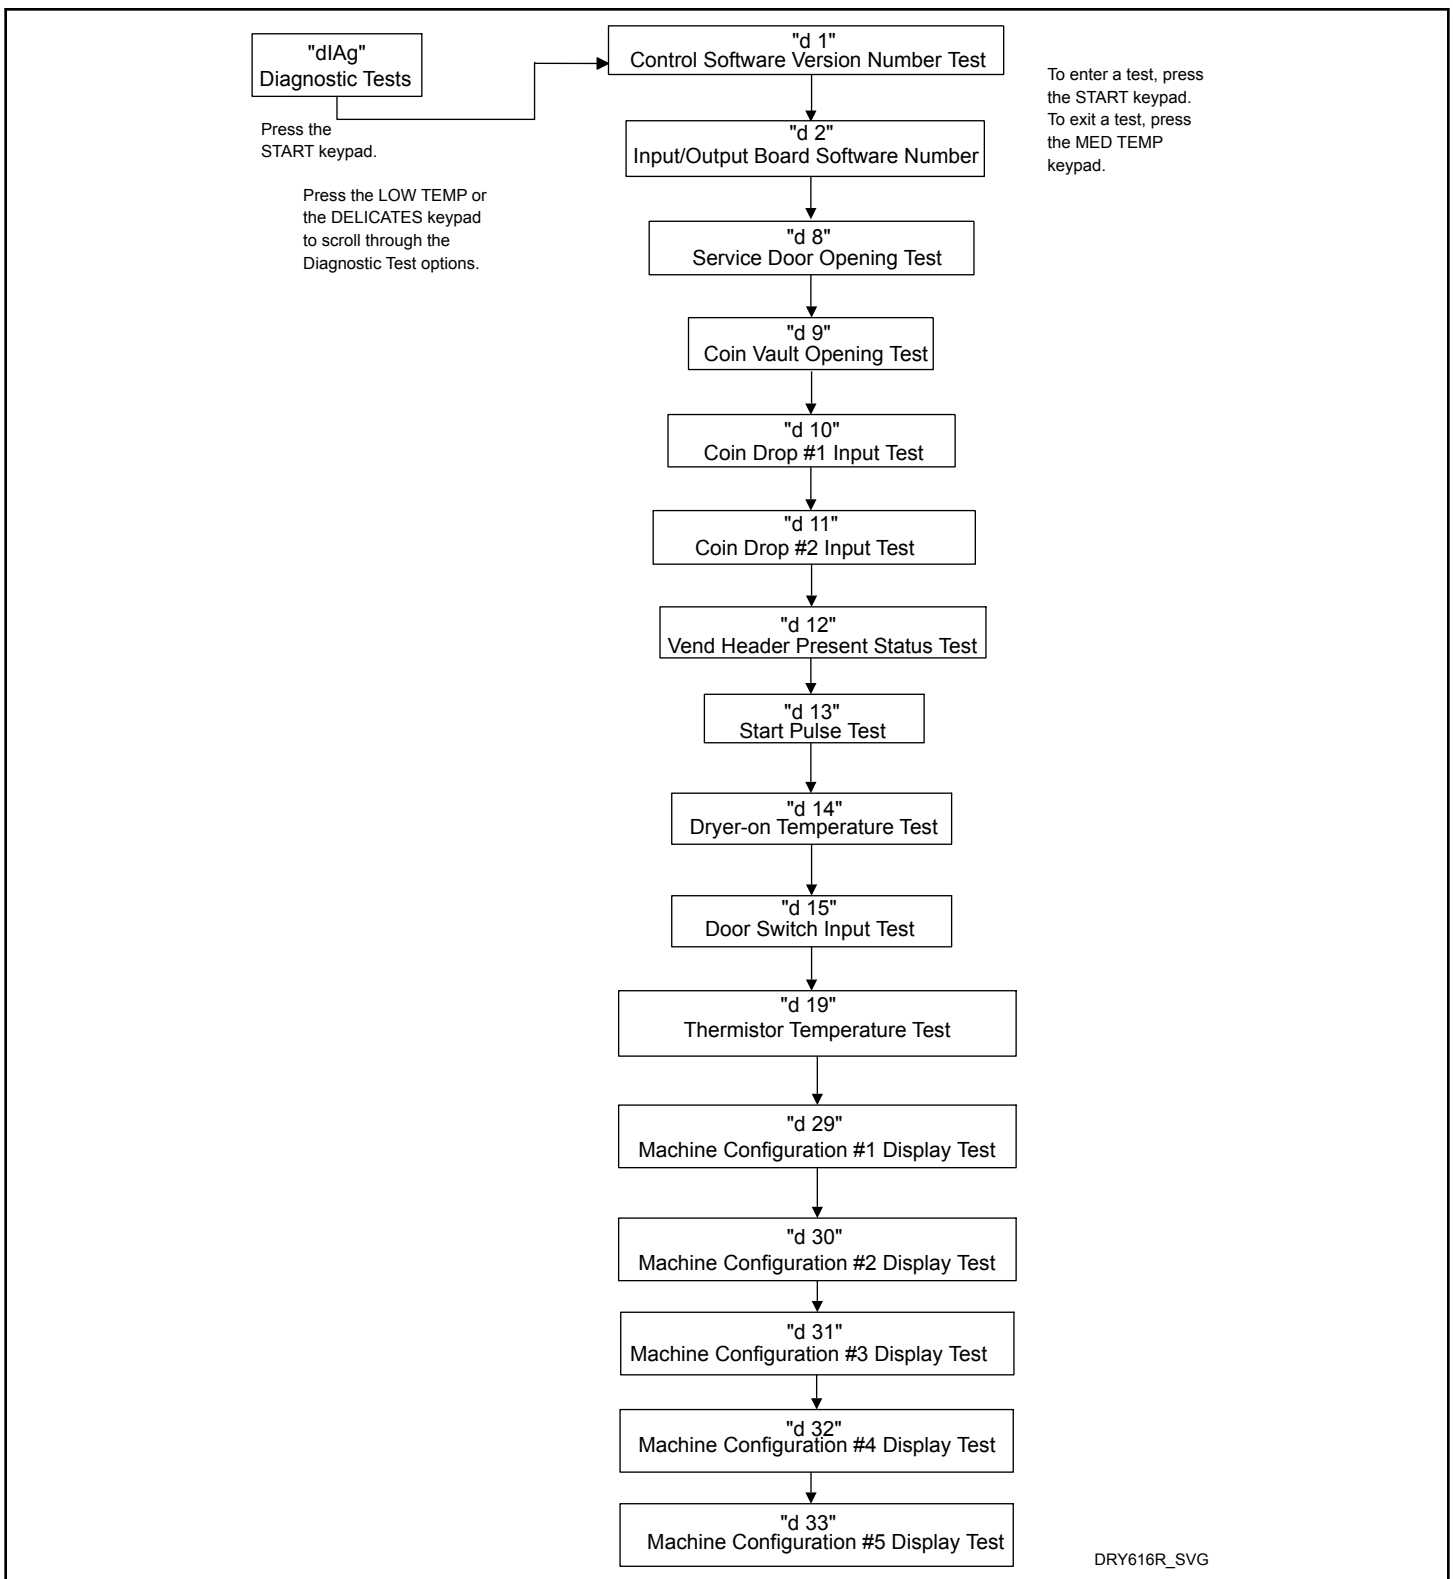


Figure 10

Diagnostic Test Descriptions

Control Software Version Number Test

This option displays the control software version number. To start test, control must be in the Testing Mode. Refer to "How to Enter Testing Feature" at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **5 HHH** where **HHH** is the software version number.

To enter, press the START (enter) keypad. The display will show **5 HHH** where **HHH** is the software version number.

To exit the Software Version Number Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Input/Output Board Software Version Number Test

This option displays the input/output board software version number. To start test, control must be in the Testing Mode. Refer to "How to Enter Testing Feature" at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **▫bHH** where **HH** is the software version number.

To enter, press the START (enter) keypad. The display will show **▫b HHH** where **HHH** is the software version number.

To exit the Software Version Number Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Service Door Opening Test

This option tests the service door switch. To start test, control must be in the Testing Mode. Refer to *How To Enter Testing Feature* at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **5 ▫P** when the service door switch is open and **5 CL** when the service door switch is closed.

The service door switch has to be closed for at least one second and opened for at least a half a second to make a valid count. This test will add counts to the service door opening counter for the audit and save the date/time for each opening of the test.

To exit the Service Door Opening Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Coin Vault Opening Test

This option tests the coin vault switch. To start test, the control must be in the Testing Mode. Refer to *How To Enter Testing Feature* at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **U ▫P** when the coin vault switch is open and **U CL** when the coin vault switch is closed.

To enter, press the START (enter) keypad. The display will show **▫ ▫P** when the coin vault switch is open and **▫ CL** when the coin vault switch is closed.

The coin vault switch has to be closed for at least one second and opened for at least a half a second to make a valid count. This test will add counts to the coin vault opening counter for the audit and save the time/date for each opening of the test.

To exit the Coin Vault Opening Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Coin Drop #1 Input Test

This option tests coin drop #1. To start test, control must be in the Testing Mode. Refer to *How To Enter Testing Feature* at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **CL IHH**. The **xx** will show the number of coins entered and will increment one for each coin entered in coin drop #1.

To enter, press the START (enter) keypad. The display will show **CL I HH**. The **HH** will show the number of coins entered and will increment one for each coin entered in coin drop #1.

NOTE: Coins entered in test mode will not increment the total # of coins counter that is accessed in the audit feature.

To exit the Coin Drop #1 Input Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Coin Drop #2 Input Test

This option tests coin drop #2. To start test, control must be in the Testing Mode. Refer to *How To Enter Testing Feature* at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **CL 2HH**. The **xx** will show the number of coins entered and will increment one for each coin entered in coin drop #2.

To enter, press the START (enter) keypad. The display will show **CL 2 HH**. The **HH** will show the number of coins entered and will increment one for each coin entered in coin drop #2.

NOTE: Coins entered in test mode will not increment the total # of coins counter that is accessed in the audit feature.

To exit the Coin Drop #2 Input Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Vend Header Present Status Test

This option tests the status of the vend header present jumper.

To start test, control must be in Testing Mode. Refer to *How To Enter Testing Feature* at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **CHCL** if jumper is present and **CHoP** if jumper is not present.

To exit the Vend Header Present Status Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Start Pulse Test

This option tests the Start Pulse. To start test, control must be in the Testing Mode. Refer to *How To Enter Testing Feature* at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **5LHH**. The **HH** will show the number of pulses entered. This test will add counts to the total number of Start Pulses counter.

To enter, press the START (enter) keypad. The display will show **5L HH**. The **HH** will show the number of pulses entered. This test will add counts to the total number of Start Pulses counter.

To exit the Start Pulse Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Dryer-on Temperature Test

This option tests the temperature inside the cylinder while running a cycle.

To start test, control must be in the Testing Mode. Refer to “How to Enter Testing Feature ” at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **H---** for degrees in Fahrenheit or **H---** for degrees in Celsius. The **---** will show the degrees.

To exit the test, open the door. The control will then return to the testing mode.

NOTE: MED TEMP (<) keypad can't be used to exit Dryer-on Temperature Test since it is needed to select the Medium cycle.

Door Switch Input Test

This option tests the door switch. To start test, control must be in the Ready Mode or Starting Mode. Refer to "How to Enter Testing Feature" at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **dr oP** if loading door is open or **dr LL** if loading door is closed.

To enter, press the START (enter) keypad. The display will show **dr oP** if loading door is open or **dr LL** if loading door is closed.

CONFIGVALUE	NETWORK BOARD PRESENT	VEND CONNECTION PRESENT	COIN DROP #2 PRESENT	COIN DROP #1 PRESENT
0	NO	NO	NO	NO
5	NO	YES	NO	YES
6	NO	YES	YES	NO
7	NO	YES	YES	YES

Table 22 continues...

To exit the Door Switch Input Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Thermistor Temperature Test

This option displays the temperature sensed at the thermistor in 5°F increments.

To start test, control must be in the Testing Mode. Refer to “How to Enter Testing Feature ” at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **HHHF** or **HHHC**. The **F** will show Fahrenheit, the **C** will show Celsius and the **HHH** will show degrees. If control senses a shorted thermistor, the display will show **5H**. If the control senses an open thermistor, the display will show **oP**.

To exit this test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Machine Configuration Display #1 Test

This option shows whether coin drops and communication interfaces are connected. To start test, control must be in the Testing Mode. Refer to “How to Enter Testing Feature” at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **RHHH**, with **HHH** a number corresponding to whether or not coin drops are connected, or serial card reader or network board are connected.

To enter, press the START (enter) keypad. The display will show **R HHH**, with **HHH** a number corresponding to whether or not coin drops are connected, or serial card reader or network board are connected.

Refer to *Table 22* for test information.

To exit Machine Configuration Display #1 Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Machine Configuration Table

CONFIGVALUE	NETWORK BOARD PRESENT	VEND CONNEC-TION PRESENT	COIN DROP #2 PRESENT	COIN DROP #1 PRESENT
8	YES	NO	NO	NO
13	YES	YES	NO	YES
14	YES	YES	YES	NO
15	YES	YES	YES	YES

Table 22

Machine Configuration Display #2 Test

This option is not used on this model.

Machine Configuration Display #3 Test

This option is not used on this model.

Machine Configuration Display #4 Test

This option shows which dipswitches are set on the control.

To start test, control must be in the Testing Mode. Refer to "How to Enter Testing Feature" at the beginning of this section.

To enter, press the START (enter) keypad. The display will show **dHHH**, with **HHH** representing the machine capacity. Refer to table below.

To enter, press the START (enter) keypad. The display will show **D HHH**, with **HHH** representing the machine capacity. Refer to table below.

Config Value	Payment System Present	120VAC Supply*
0	0	0
1	0	1
4	1	0
5	1	1

*120VAC is supplied to the control for 120VAC Single Phase and 240VAC Split Phase configurations.

If supply voltage is 100-127VAC per phase, the voltage configuration should be 120VAC.

Factory Test Cycle Quick Reference Table		
Display	Test Mode	Comments

Table 23 continues...

If supply voltage is 200-240VAC per phase, the voltage configuration should be 240VAC.

To exit Machine Configuration Display #4 Test, press the MED TEMP (<) keypad. The control will return to the testing mode.

Machine Configuration Display #5 Test

This option is not used on this model.

Factory Test Cycle

To Enter Factory Test Cycle

1. Be certain control is in Ready Mode, and service door or coin vault is open.
2. While pressing and holding the HIGH TEMP keypad with one hand, press the LOW TEMP keypad with the other hand.
3. When the control enters the Factory Test Cycle, it will first display **dr** for product type (dryer).
4. When the control enters the Factory Test Cycle, it will first display **Ed** for product type (tumble dryer).
5. The control will advance through the sequence of test steps whenever the START (enter) keypad is pressed, with the exception of the Keypad Test. Refer to *Table 23 Table 1* for all tests in the Factory Test Cycle.

To Exit Factory Test Cycle

The test will be exited when the time reaches **00** on the control in Step #10. Otherwise, the control must be powered down to end the test.

<i>dr</i>	Machine Type	<i>dr</i> is the machine type (dryer)
<i>SHH SHHH</i>	Software Version	<i>HH HHH</i> is the software version number.
<i>obHH</i>	Output Board Version Number	<i>HH</i> is the output board version number.
<i>AH</i>	Control Type	<i>H</i> is the feature level of the control.
<i>HH</i>	DipSwitch Configuration	<i>HH</i> is the machine type. <i>00</i> is 120V and <i>01</i> is 240V.
<i>PRd</i> or <i>PRHH</i>	Keypad Test	When a key is pressed, the control will display the number assigned to the keypad (1 - HIGH TEMP, 2 - LOW TEMP, 3 - NO HEAT, 4 - MED TEMP, 5 - DELICATES, 6 - START) (4 - HIGH TEMP, 5 - LOW TEMP, 7 - MED TEMP, 8 - DELICATES, 9 - START). As each keypad is pressed, its corresponding LED will be lit and remain on for the duration of the test. When all keypads have been pressed, the control will advance to Show Entire Display Mode test cycle.
All LEDs and display segments will light	Show Entire Display Mode	This mode will light all display elements.
<i>CHCH</i>	Coin Drop Test	<i>H</i> is the number of coins entered. If dual coin drops are installed, coin drop #1 will be shown on the left of the display and coin drop #2 will be shown on the right of the display. If a single coin drop is used, only one coin count will increment.
<i>U oP</i> or <i>U CL</i> <i>u oP</i> or <i>u CL</i>	Coin Vault Switch Test	<i>oP</i> signifies the coin vault switch is open or <i>CL</i> signifies the coin vault switch is closed.
<i>5 oP</i> or <i>U CL</i>	Service Door Switch Test	<i>oP</i> signifies the service door switch is open or <i>CL</i> signifies the service door switch is closed.
<i>HHHF</i> or <i>HHHC</i>	Thermistor Temperature Test	The temperature will be displayed in either Fahrenheit or Celsius, depending on machine's configuration. If control senses a shorted thermistor, SH will be displayed. If control senses an open thermistor, oP will be displayed.

Table 23 continues...

<i>10 PUSH, Start, 10</i>	10 Minute Test Cycle	Determines if dryer can function in a cycle for 10 minutes. LED display will flash one second on and one second off. If the door is opened while the START LED is flashing, the control will display “door” until the door is closed. While this 10 Minute Test Cycle is running, the START pad may be used to decrement the remaining cycle time. If power to the control is turned off before this test cycle has ended, the cycle is cleared. When the control is powered back up, it will be reset to Ready Mode.
<i>Pd</i>	Power Down	This is the final step of the Factory Test Cycle and when displayed it signifies the test has been completed.

Table 23

NOTE: If power to the control is turned off before 10 Minute Test Cycle has ended, the cycle will be cleared from control.

Error Codes

Following is a list of possible error codes for an electronic control. Errors beginning with **EI** refer to external device Infra-red communication errors. Errors beginning with **EC** refer to card reader errors. All other errors refer to machine errors.

Display	Description	Cause/ Corrective Action
EI 01 E .01	Transmission Failure	Communication failure. Re-aim external device and try again.
EI 02 E .02	Device Time-out	Communication failure. Re-aim external device and try again.
EI 03 E .03	Invalid Command Code	Incorrect machine type. Before downloading, ensure data is for current machine type.
EI 04 E .04	Command Packet Time Out	Communication failure. Re-aim external device and try again.
EI 05 E .05	Invalid or Out-of-Range Data	Incorrect machine type. Before downloading, ensure data is for current machine type and values entered are within the minimum and maximum limits.
EI 09 E .09	CRC-16 Error	Communication failure. Re-aim external device and try again.
EI 0A E .0A	Framing Error	Communication error. Re-aim external device and try again.
EI 0C E .0C	Time-out Exceeded	Communication error. Re-aim external device and try again.
EI 0E E .0E	Encryption Error	Incorrect machine type. Before downloading, ensure data is for current machine type.
EI 0F E .0F	Invalid Wake-up or Infra-red Disabled	Communication failure or infra-red is disabled. Manually enable infra-red on control or re-aim external device and try again.
EC 02	Time-out Error	Communication failure. Try card again.
EC 03	Invalid Command Code	Incorrect machine type. Before downloading, ensure data is for current machine type.
EC 05	Invalid or Out-of-Range Data	Incorrect machine type. Before downloading, ensure data is for current machine type and values entered are within the minimum and maximum limits.
EC 11	No Card Reader Initialization	Communication is valid, but there is no card reader initialization. Power down, power up and try again.

Table 24 *continues...*

Display	Description	Cause/ Corrective Action
<i>EC 18</i>	No Communication	Card reader initialized, communication lost. Power down, power up and try again. If error persists, replace control or card reader.
<i>EC 19</i>	No Card Reader Communication and No Card Reader Initialization	Communication failure. Power down, power up, check connections, harness and try again. If error persists, replace control or card reader.
<i>EC 36</i>	Audit Card Removed Prematurely	Re-insert Audit Card and wait until machine prompts for card removal.
Right most decimal point Lit	Network Communication Error	Communication problem. Wait for 1.5 minutes for error to clear. If error doesn't clear, power-down and power-up the machine. Check all network connections. If error persists, replace control or network board.
<i>ALArn ALi</i>	Break-in Alarm Error	Service the service door or coin vault switches.
<i>aFF</i>	Break-in Alarm Shutdown Error	Service the service door or coin vault switches.
<i>Err</i>	Coin Error	Invalid coin pulse or inoperative coin sensor. Check coin drop area and remove obstructions. If error persists, tampering may have occurred. Evaluate security procedures.
<i>E 5H</i>	Shorted Thermistor Error	Dead short in thermistor circuit. Check wiring harness and remove any lint build-up around thermistor. If problem persists, replace thermistor or output board.
<i>E aP</i>	Open Thermistor Error	Physical open in thermistor circuit. Check wiring harness and remove any lint build-up around thermistor. If problem persists, replace thermistor or output board.
<i>E id</i>	Board ID	Incorrect replacement control. Replace user control or output board with correct part.

Table 24 *continues...*

Display	Description	Cause/ Corrective Action
<i>E d5</i>	Brownout/Voltage Configuration	Unexpected supply voltage. Check the harness connections between the user control and the output board. If the user control was replaced, set dipswitch #1 to the same setting as the previous control. If reworking the machine to use a different supply voltage, the dip switch #1 setting may need to be changed. If the dip switch #1 setting is changed, power down, power up and try again.
<i>E nr</i>	Output Board Not Ready	Hardware failure. Replace output board.
<i>E b5</i>	Output Board Communication	Hardware failure. Replace output board.
<i>E nHH</i>	Machine ID	Communication failure. Power down, power up and try again. If error persists, check connection between user control and Machine ID chip, or try replacing the user control or the Machine ID chip.
<i>E Co</i>	Output Board Communication	Communication failure. Power down, power up and try again. If error persists, check connection between user control and output board, or try replacing the user control or the output board.
<i>E 59</i>	Door Input Acquisition	Hardware failure. Replace output board.
<i>E 60</i>	Centrifugal Switch Input Acquisition	Hardware failure. Replace output board.
<i>E 61</i>	High Limit Thermostat Input Acquisition	Hardware failure. Replace output board.
<i>E ro</i>	Locked Rotor	The motor is not sensed as rotating when it should be. Check that nothing is obstructing motor rotation, check connection between user control and output board, or try replacing the user control or the output board.
<i>E n5</i>	Motor Output Shorted	Hardware failure. Replace output board.

Table 24

Rapid Advance Feature

This feature allows the user to quickly advance through an active cycle or advance into a cycle from the Ready Mode. This feature is useful when tests must be performed immediately on a machine currently in an active cycle. In this case, the user can quickly advance through the cycle to the Ready Mode. At this point, the user can perform the required tests and then return the machine to the active cycle.

This feature allows the user to quickly advance through an active cycle. This feature is useful when tests must be performed immediately on a machine currently in an active cycle. In this case, the user can quickly advance through the cycle to the Ready Mode. At this point, the user can perform the required tests and then return the machine to the active cycle.

How to Enter Rapid Advance from Ready Mode

1. If control is in Ready Mode, control must be put into Manual Mode. Refer to *Entering the Manual Mode*.
2. Press the LOW TEMP (Λ) or the DELICATES (v) keypad until *rRP id* appears in the display.
3. Press the START (enter) keypad. The display will show *PUSH* then *5:00* followed by the cycle time.
4. Press the START (enter) keypad to start cycle.

While in the Rapid Advance Mode, pressing the START (enter) keypad will advance the cycle time by one minute. Pressing and holding the START (enter) keypad will advance the cycle four minutes for every second the START (enter) keypad is held down.

How to Enter Rapid Advance During an Active Cycle

1. Be certain service door is open.
2. While pressing and holding the HIGH TEMP keypad with one hand, press the MED TEMP keypad with the other hand. The display will show *rRP id*.

Control may be in an active cycle or in the ready mode to use the Rapid Advance feature.

How to Exit Rapid Advance Feature

Advance through the cycles until reaching the Ready Mode.

Clear Vend Feature

The Clear Vend feature allows the owner to clear a control which is in the middle of satisfying the initial vend price, and set it back to the ready mode.

NOTE: The Clear Vend Feature does not work with Additional Vend Mode or Additional Cycle Top-Off.

How to Clear Vend

1. Open the service door. Refer to Opening the Service Door .
The coin vault must remain closed.
2. While pressing and holding the MED TEMP keypad with one hand, press the LOW TEMP keypad with the other hand. The control will reset to the ready mode.

Power Fail Recovery

The Power Fail Recovery feature allows the cycle status to be saved in memory in the event of a power failure.

If the power failure lasted less than 5 seconds and the door is locked, the cycle will resume without requiring the user to press the START (enter) keypad to restart.

If the power failure lasted longer than 5 seconds, the Power Fail Reset option is turned **on**, and the duration of the power failure is less than or equal to the time programmed in the Power Fail Reset option, the door is unlocked and the START (enter) keypad will flash until it is pressed and the cycle will restart from the point it left off.

If the power failure lasted longer than 5 seconds and the Power Fail Reset option is turned **off**, the door is unlocked and the START (enter) keypad will flash one second on and one second off until it is pressed. The cycle will restart from the point it left off when START (enter) is pressed.

If the power failure lasted longer than 5 seconds, lasted longer than the time programmed in the Power Fail Reset option, and the Power Fail Reset option is turned **on**, the control will reset the cycle and lose all vending entered for the cycle.

Power Fail Reset Disabled

If the Power Fail feature is disabled, the control will resume the cycle from the point it left off after the START pad is pressed.

Power Fail Reset Enabled

If the length of the power failure is less than the programmed Power Failure Reset time, the control will resume the cycle from the point it left off. The cycle will resume after the START pad is pressed.

If the power failure lasted more than the programmed power failure reset time, the control will end the cycle and will return to the Ready Mode.

Communications Mode

Infra-red Communications

The Infra-red Communications feature allows the control to communicate with an external device. The control can be programmed and have its data read without using the keypad. It may also be used to start and stop various diagnostic tests.

How to Begin Communications with an External Device

The control will go blank and the display will show *-E-* until the communication is complete. The display will return to the previous mode. If an error occurs that terminates communication, the display will show *EI HH* (*HH* represents the error code).

Card Reader Communications (Card Models Only)

The Card Reader Communications feature allows the control to communicate with the card reader. The control can be programmed for a limited number of options and have its data read without using the keypad.

Network Communications

The Network Communications feature allows the control to communicate with a network. The control can be programmed and have its data read without using the keypad.